

# TRANSFER INDICATOR SWITCH

## ON-VEHICLE INSPECTION

### 1. INSPECT TRANSFER INDICATOR SWITCH (for 4WD Position)

- (a) Measure the resistance of the switch.

#### Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 - 2	Pushed	Below 1 $\Omega$
1 - 2	Not pushed	10 k $\Omega$ or higher

If the result is not as specified, replace the switch.

### 2. INSPECT TRANSFER INDICATOR SWITCH (for 4L Position)

- (a) Measure the resistance of the switch.

#### Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 - 2	Pushed	Below 1 $\Omega$
1 - 2	Not pushed	10 k $\Omega$ or higher

If the result is not as specified, replace the switch.

### 3. INSPECT TRANSFER INDICATOR SWITCH (for Neutral Position)

- (a) Measure the resistance of the switch.

#### Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 - 2	Pushed	Below 1 $\Omega$
1 - 2	Not pushed	10 k $\Omega$ or higher

If the result is not as specified, replace the switch.

