

INSTALLATION

1. **INSTALL TRANSFER ASSEMBLY**
 - (a) Install the transfer onto the transmission.
 - (b) Install the 2 clamps and 8 bolts.
Torque: 24 N*m (244 kgf*cm, 17 ft.*lbf)
2. **INSTALL MANUAL TRANSMISSION ASSEMBLY (for Manual Transmission)**
 - (a) Install the manual transmission (see page [MT-11](#)).
3. **INSTALL LOWER TRANSFER CASE PROTECTOR (See page [TF-8](#))**
4. **ADD TRANSFER OIL (See page [TF-6](#))**
5. **CHECK FOR TRANSFER OIL LEAKAGE**
6. **CHECK FOR EXHAUST GAS LEAKAGE**