

## INSTALLATION

1. **INSTALL TRANSFER CASE OIL SEAL**
  - (a) Coat the lip of a new oil seal with MP grease.
  - (b) Using SST and a hammer, tap in the oil seal until its surface is flush with the case upper surface.  
**SST 09316-60011 (09316-00011)**
2. **REMOVE TRANSFER OUTPUT SHAFT COMPANION FLANGE OIL SEAL (See page [TF-41](#))**
3. **INSTALL OUTPUT SHAFT COMPANION FLANGE SUB-ASSEMBLY (See page [TF-42](#))**
4. **INSTALL FRONT PROPELLER SHAFT ASSEMBLY (See page [PR-2](#))**
5. **INSTALL LOWER TRANSFER CASE PROTECTOR**
  - (a) Install the protector with the 5 bolts.  
**Torque: 18 N\*m (183 kgf\*cm, 13 ft.\*lbf)**
  - (b) Install the brake hose clamp.
6. **ADD TRANSFER OIL (See page [TF-6](#))**
7. **CHECK FOR TRANSFER OIL LEAKAGE (See page [TF-6](#))**

