


# REAR WIPER MOTOR

## COMPONENTS

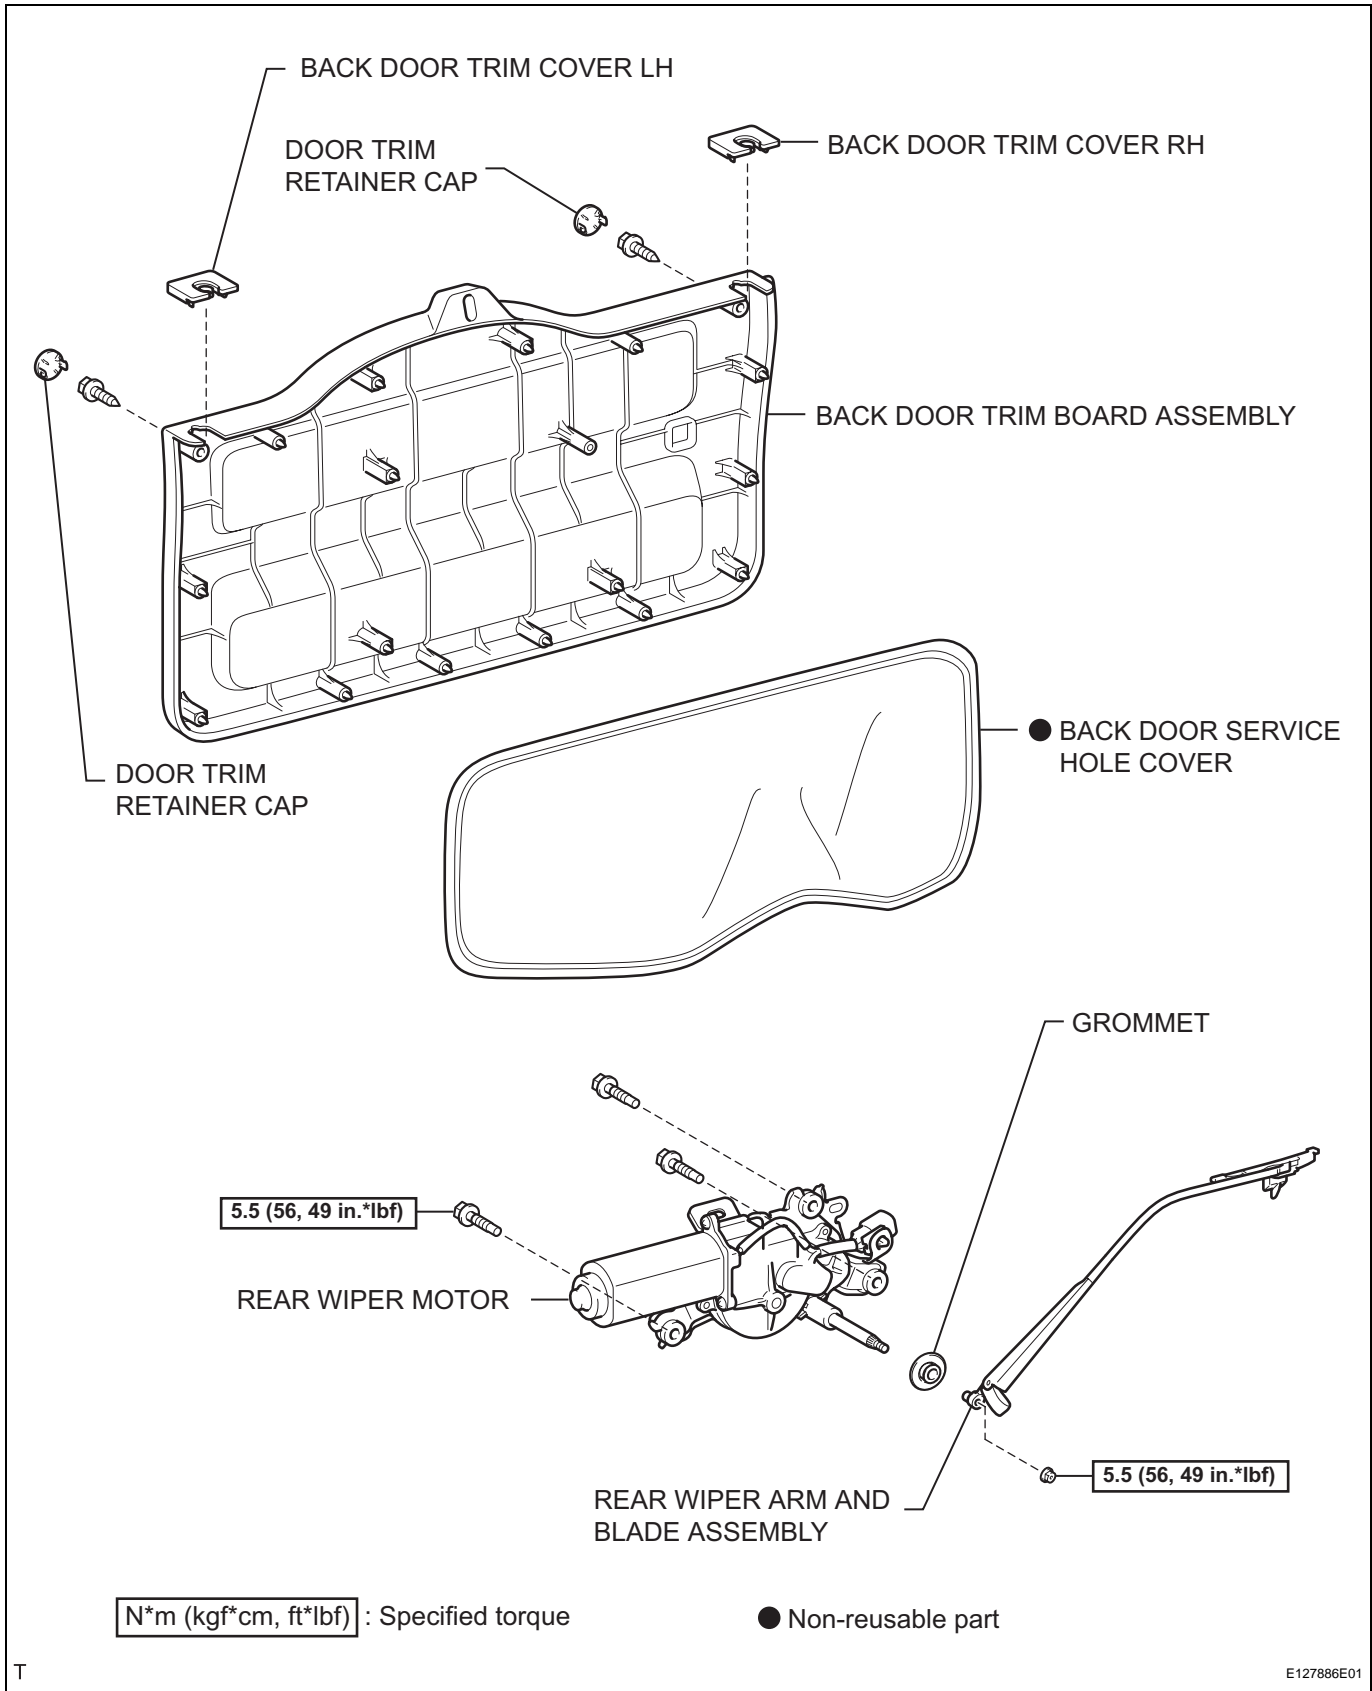

WW

## ON-VEHICLE INSPECTION

### 1. INSPECT REAR WIPER MOTOR

- (a) Check the automatic stop position.
  - (1) Operate the rear wiper motor, then stop the operation.
  - (2) Check the automatic stop position (rise-up position) when the rear wiper motor operation has stopped.

**Standard:**

**Rear wiper arm stops in the position shown in the illustration.**

