
REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

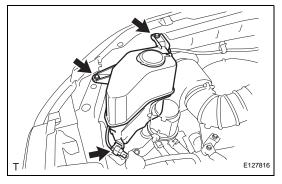


- (a) Disconnect the connector.
- (b) Remove the 2 bolts and the windshield washer jar assembly.



3. DRAIN WASHER FLUID

- (a) w/o Rear wiper
 - Disconnect the washer hose from the windshield washer motor and pump, and drain the washer fluid.
- (b) w/ Rear wiper
 - (1) Disconnect the 2 washer hoses from the windshield washer motor and pump, and drain the washer fluid.

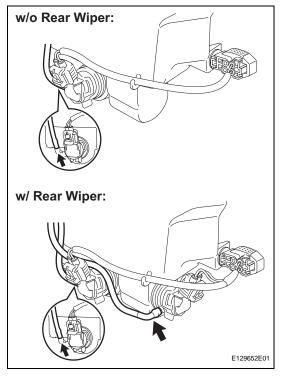


T E127818

4. DISCONNECT WASHER WIRING


(a) Disconnect the connector and the harness clamps.



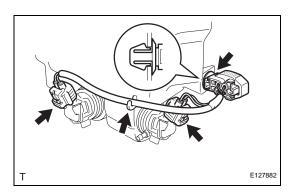


5. DISCONNECT WASHER WIRING (w/ Rear Wiper)

(a) Disconnect the 2 connectors and the harness clamps.

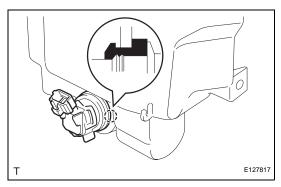

6. REMOVE FRONT WASHER MOTOR AND PUMP ASSEMBLY


(a) Pull the washer motor and pump out of the packing of the washer jar.

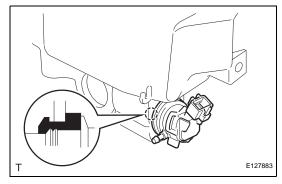

REMOVE REAR WASHER MOTOR AND PUMP ASSEMBLY (w/ Rear Wiper)

(a) Pull the washer motor and pump out of the packing of the washer jar.




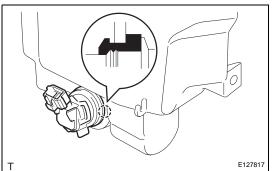

INSTALLATION


1. INSTALL FRONT WASHER MOTOR AND PUMP ASSEMBLY

(a) Install the windshield washer motor and pump onto the packing of the washer jar.

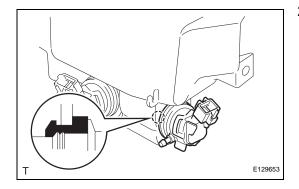


INSTALL REAR WASHER MOTOR AND PUMP ASSEMBLY (w/ Rear Wiper)

(a) Install the windshield washer motor and pump onto the packing of the washer jar.

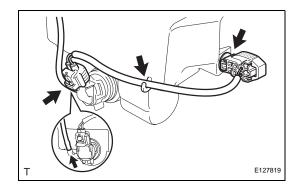

3. CONNECT WASHER WIRING


- (a) Connect the connector and the harness clamps.
- (b) Connect the washer hose.

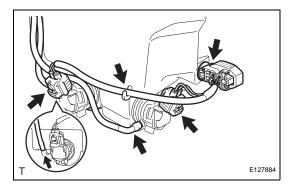

4. CONNECT WASHER WIRING (w/ Rear Wiper)

- (a) Connect the 2 connectors and the harness clamps.
- (b) Connect the 2 washer hoses.



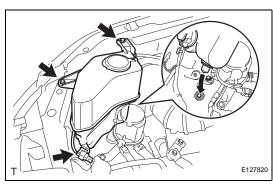

5. INSTALL WINDSHIELD WASHER JAR ASSEMBLY

- (a) Install the windshield washer jar with the 2 bolts. Torque: 3.5 N*m (36 kgf*cm, 31 in.*lbf)
- (b) Connect the connector.

6. FILL UP WASHER JAR AND PUMP ASSEMBLY WITH WASHER FLUID

- (a) Fill the washer jar with washer fluid.
- 7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)