


FUEL PRESSURE REGULATOR

COMPONENTS

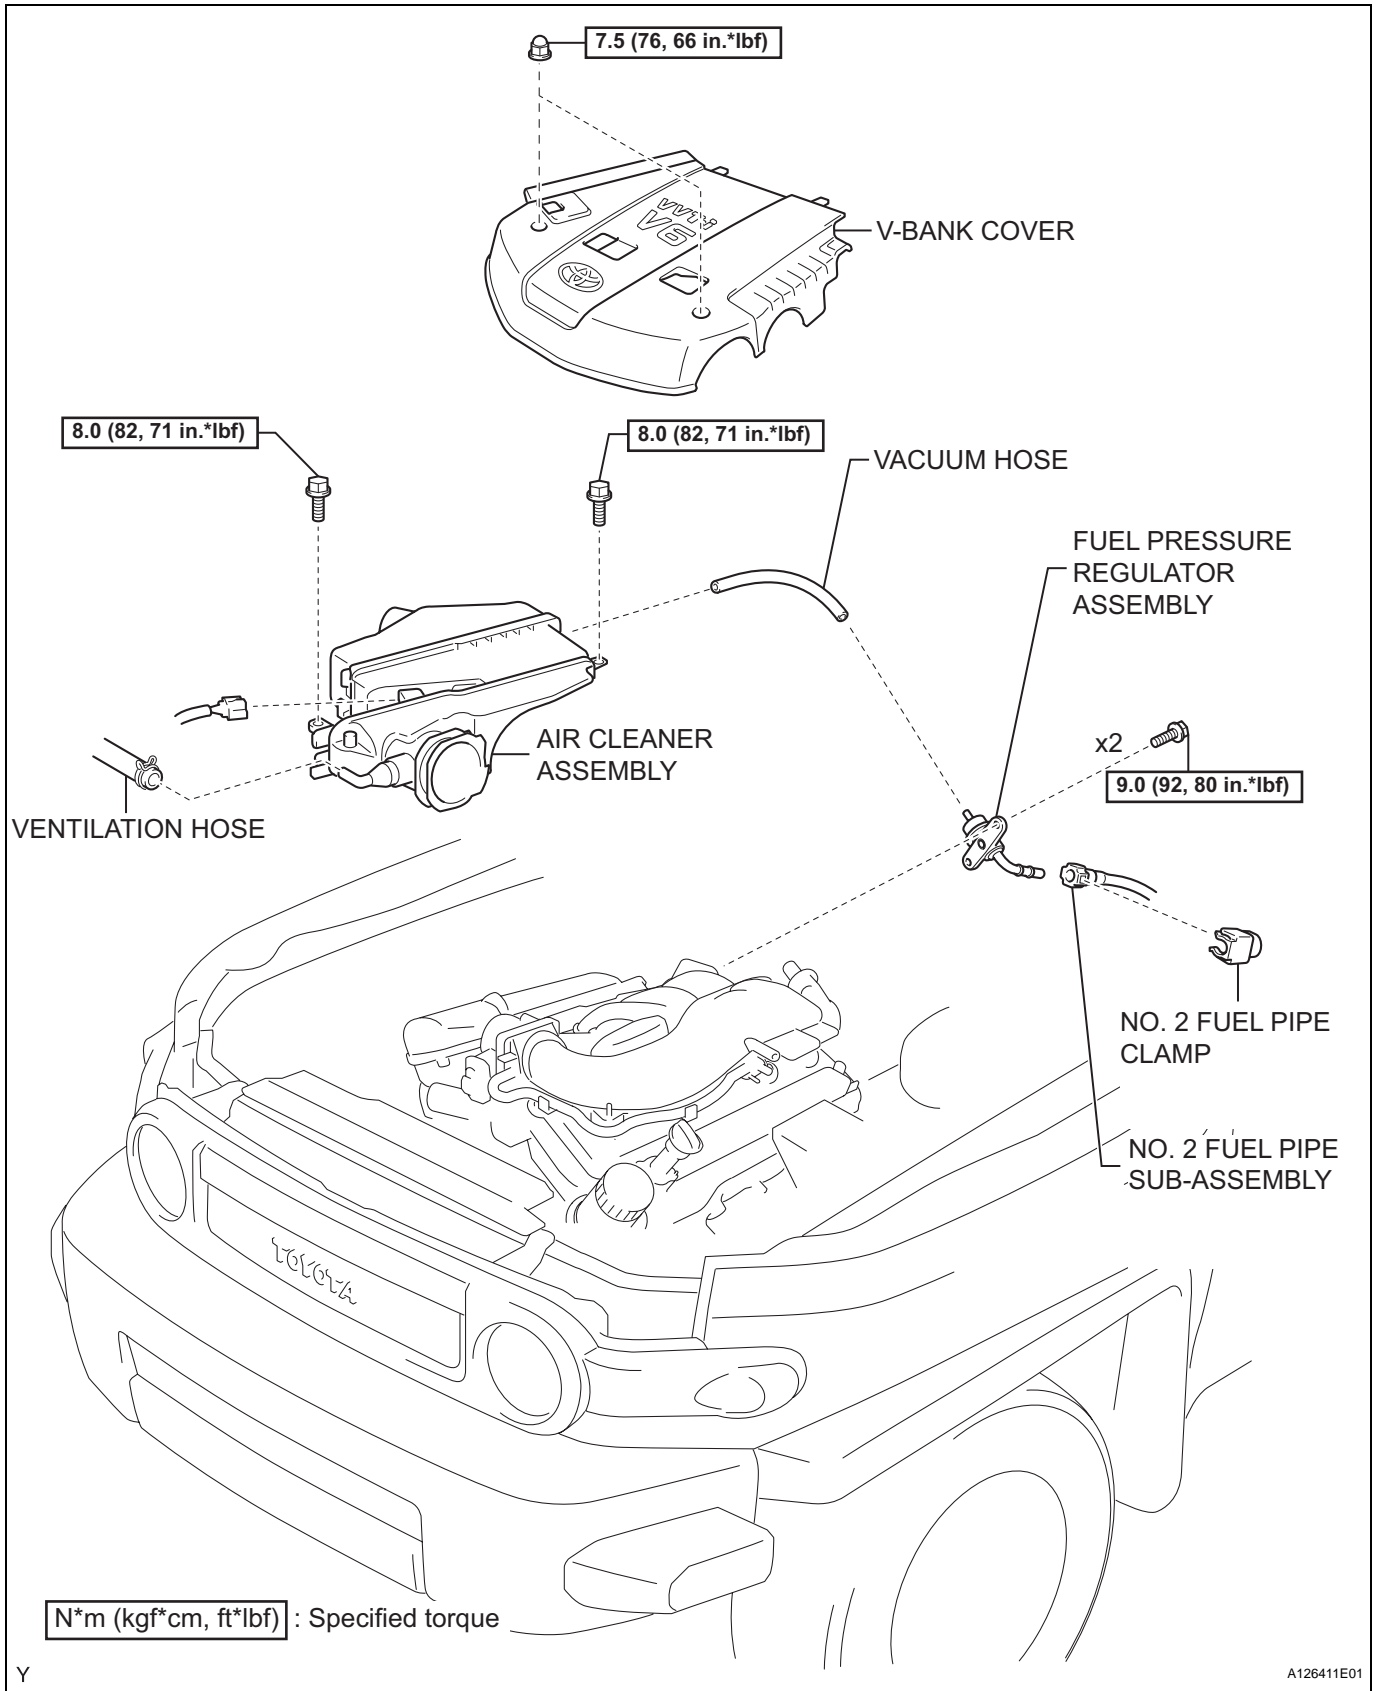

FU

REMOVAL

1. **DISCHARGE FUEL SYSTEM PRESSURE**
(See page [FU-1](#))
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
3. **REMOVE V-BANK COVER** (See page [ES-428](#))
4. **REMOVE AIR CLEANER ASSEMBLY** (See page [ES-429](#))
5. **DISCONNECT NO. 2 FUEL PIPE SUB-ASSEMBLY**
(See page [FU-14](#))
6. **REMOVE FUEL PRESSURE REGULATOR ASSEMBLY**
 - (a) Remove the vacuum hose.
 - (b) Remove the 2 bolts, then remove the fuel pressure regulator.

