



## INSTALLATION

1. **INSTALL BLOWER UNIT ASSEMBLY**
  - (a) Install the 2 screws and blower unit as shown in the illustration.
2. **INSTALL INSTRUMENT PANEL REINFORCEMENT** (See page [AC-49](#))
3. **INSTALL COOLER UNIT DRAIN HOSE** (See page [AC-51](#))
4. **INSTALL MAIN BODY ECU (DRIVER SIDE J/B)** (See page [AC-52](#))
5. **INSTALL INSTRUMENT PANEL SIDE BRACKET** (See page [AC-52](#))
6. **INSTALL STEERING COLUMN ASSEMBLY** (See page [SR-16](#))
7. **INSTALL STEERING INTERMEDIATE SHAFT ASSEMBLY** (See page [AC-52](#))
8. **INSTALL STEERING COLUMN HOLE COVER** (See page [SR-17](#))
9. **INSTALL ECM** (See page [ES-447](#))
10. **INSTALL NO. 1 INSTRUMENT PANEL BRACE BRACKET** (See page [AC-52](#))
11. **INSTALL NO. 1 AIR DUCT** (See page [AC-53](#))
12. **INSTALL NO. 2 AIR DUCT** (See page [AC-53](#))
13. **INSTALL REAR NO. 1 AIR DUCT** (See page [AC-53](#))
14. **INSTALL REAR NO. 2 AIR DUCT** (See page [AC-53](#))
15. **INSTALL NO. 1 HEATER TO REGISTER DUCT** (See page [AC-54](#))
16. **INSTALL NO. 2 HEATER TO REGISTER DUCT** (See page [AC-54](#))
17. **INSTALL INSTRUMENT PANEL SUB-ASSEMBLY** (See page [IP-26](#))
18. **CONNECT PASSENGER AIRBAG CONNECTOR** (See page [IP-26](#))
19. **INSTALL INSTRUMENT PANEL FINISH PANEL END LH** (See page [IP-27](#))
20. **INSTALL ASSIST GRIP RETAINER RH** (See page [IP-27](#))
21. **INSTALL ASSIST GRIP RETAINER LH** (See page [IP-27](#))
22. **INSTALL FRONT NO. 2 SPEAKER ASSEMBLY** (See page [AV-62](#))
23. **INSTALL NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY** (See page [IP-27](#))

24. INSTALL NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY (See page [IP-27](#))
25. INSTALL NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY (See page [IP-27](#))
26. INSTALL INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY RH (See page [IP-28](#))
27. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-28](#))
28. INSTALL COMBINATION METER ASSEMBLY (See page [IP-28](#))
29. INSTALL INSTRUMENT CLUSTER FINISH PANEL (See page [IP-29](#))
30. INSTALL LOWER INSTRUMENT PANEL LH (See page [IP-29](#))
31. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LH (See page [IP-29](#))
32. CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [IP-30](#))
33. INSTALL NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY (See page [IP-30](#))
34. INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-30](#))
35. INSTALL CONSOLE UPPER PANEL NO. 1 GARNISH (See page [IP-31](#))
36. INSTALL FRONT CONSOLE BOX (See page [IP-31](#))
37. INSTALL BOX BOTTOM MAT (See page [IP-31](#))
38. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (See page [IP-31](#))
39. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transmission) (See page [IP-32](#))
40. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for 4WD) (See page [IP-32](#))
41. INSTALL PARKING BRAKE HOLE COVER SUB-ASSEMBLY (See page [IP-32](#))
42. INSTALL RADIO RECEIVER ASSEMBLY (See page [AV-56](#))
43. INSTALL INTEGRATION CONTROL AND PANEL ASSEMBLY (See page [IP-32](#))
44. INSTALL INSTRUMENT PANEL GARNISH LH (See page [IP-33](#))
45. INSTALL INSTRUMENT PANEL GARNISH RH (See page [IP-33](#))
46. INSTALL FRONT PILLAR GARNISH RH (See page [IR-43](#))

47. INSTALL FRONT PILLAR GARNISH LH (See page [IR-43](#))
48. INSTALL ASSIST GRIP ASSEMBLY (See page [IR-43](#))
49. INSTALL ASSIST GRIP PLUG (See page [IR-44](#))
50. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (See page [IP-33](#))
51. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See page [IP-33](#))
52. INSTALL COWL SIDE TRIM BOARD RH (See page [IR-45](#))
53. INSTALL COWL SIDE TRIM BOARD LH (See page [IR-45](#))
54. INSTALL FOOTREST CLIP (See page [IR-2](#))
55. INSTALL FRONT FLOOR FOOTREST (See page [IR-2](#))
56. INSTALL FRONT DOOR SCUFF PLATE RH (See page [IR-45](#))
57. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-45](#))
58. INSTALL COMBINATION SWITCH ASSEMBLY (See page [SR-17](#))
59. INSTALL UPPER STEERING COLUMN COVER (See page [SR-17](#))
60. INSTALL LOWER STEERING COLUMN COVER (See page [SR-18](#))
61. INSTALL STEERING WHEEL ASSEMBLY (See page [SR-18](#))
62. INSTALL STEERING PAD (See page [RS-346](#))
63. INSTALL LOWER NO. 2 STEERING WHEEL COVER (See page [RS-347](#))
64. INSTALL LOWER NO. 3 STEERING WHEEL COVER (See page [RS-347](#))
65. CONNECT HEATER WATER OUTLET HOSE A (FROM HEATER UNIT) (See page [AC-56](#))
66. CONNECT HEATER INLET WATER HOSE (See page [AC-56](#))
67. INSTALL COOLER REFRIGERANT LIQUID PIPE A (See page [AC-57](#))
68. INSTALL COOLER REFRIGERANT SUCTION PIPE A (See page [AC-57](#))
69. INSTALL COWL TOP VENTILATOR LOUVER LH (See page [WW-30](#))
70. INSTALL COWL TOP VENTILATOR LOUVER RH (See page [WW-30](#))

71. INSTALL COWL TOP VENTILATOR LOUVER SUB-ASSEMBLY (See page [WW-31](#))
72. INSTALL FRONT FENDER SIDE PANEL UPPER LH (See page [WW-31](#))
73. INSTALL FRONT FENDER SIDE PANEL UPPER RH (See page [WW-31](#))
74. INSTALL ANTENNA ORNAMENT (See page [WW-31](#))
75. INSTALL ROOF ANTENNA POLE SUB-ASSEMBLY (See page [AV-116](#))
76. INSTALL FRONT WIPER ARM AND BLADE ASSEMBLY LH (See page [WW-32](#))
77. INSTALL FRONT WIPER ARM AND BLADE ASSEMBLY RH (CENTER SIDE) (See page [WW-32](#))
78. INSTALL FRONT WIPER ARM AND BLADE ASSEMBLY RH (See page [WW-33](#))
79. INSTALL WINDSHIELD WIPER ARM COVER (See page [WW-34](#))
80. ADD ENGINE COOLANT (See page [CO-3](#))
81. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL  
Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)
82. CHECK SRS WARNING LIGHT  
[RS-29](#)
83. CHARGE REFRIGERANT (See page [AC-16](#))
84. WARM UP ENGINE (See page [AC-18](#))
85. CHECK FOR ENGINE COOLANT LEAKAGE (See page [CO-4](#))
86. CHECK FOR REFRIGERANT LEAKAGE (See page [AC-18](#))
87. POSITION FRONT WHEELS FACING STRAIGHT AHEAD