

## VSC OFF Indicator Light does not Come ON

### DESCRIPTION

See page [BC-168](#).

### BC WIRING DIAGRAM

See page [BC-168](#).


### INSPECTION PROCEDURE

#### NOTICE:

When replacing the master cylinder solenoid, perform zero point calibration (See page [BC-24](#)).

1

### PERFORM ACTIVE TEST USING INTELLIGENT TESTER (VSC OFF INDICATOR LIGHT)

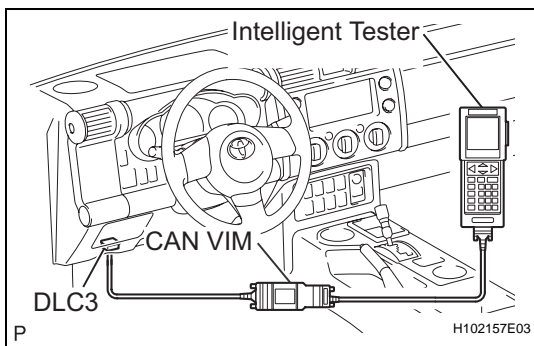

- (a) Connect the intelligent tester to the DLC3.
- (b) Turn the ignition switch on.
- (c) Turn the tester on.
- (d) Select the "VSC/BR OFF IND" in the ACTIVE TEST and operate the VSC OFF indicator light using the intelligent tester.  
Select the following menu items: DIAGNOSIS / OBD / MOBD /select vehicle / ABS/VSC / ACTIVE TEST.

#### ACTIVE TEST : ABS/VSC

Item (Display)	Test Details	Diagnostic Notes
VSC/TRC OFF IND	Turns VSC OFF indicator light ON and OFF	Observe combination meter

- (e) Check that the VSC OFF indicator light turns on and off in the combination meter using the intelligent tester.

#### OK:


The VSC OFF indicator light turns ON and OFF in accordance with the intelligent tester operation.

OK

REPLACE MASTER CYLINDER SOLENOID

NG

**2 CHECK HARNESS AND CONNECTOR (SKID CONTROL ECU - COMBINATION METER)**

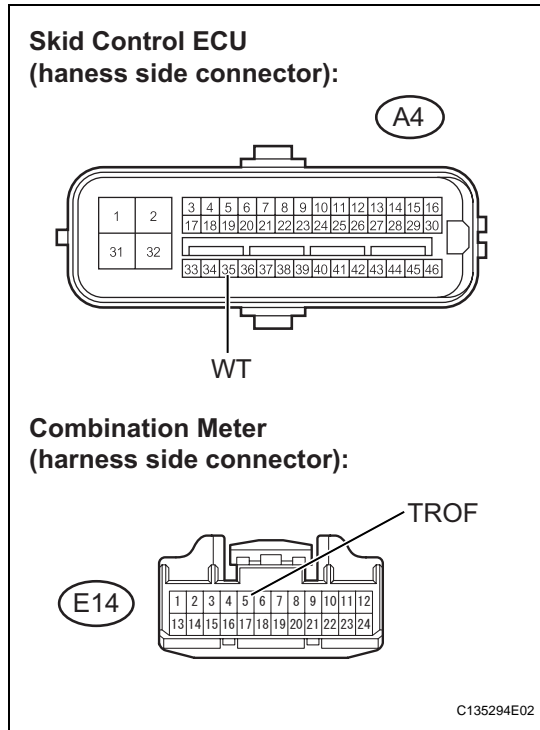

- (a) Disconnect the skid control ECU connector.
- (b) Disconnect the combination meter connector.
- (c) Measure the resistance.

**Standard resistance**

Tester Connection	Specified Condition
A4-35 (WT) - E14-5 (TROF)	Below 1 Ω
A4-35 (WT) - Body ground	10 kΩ or higher

**NG** → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

**OK**

**3 INSPECT COMBINATION METER ASSEMBLY**

- (a) Check the combination meter system (See page [ME-29](#)).
- OK:**  
Combination meter is normal.

**NG** → **REPLACE COMBINATION METER ASSEMBLY**

**OK**

**REPLACE MASTER CYLINDER SOLENOID**