

## INSTALLATION

### HINT:

The procedure described below is for the RH side. Use the same procedure for both the LH and RH sides, unless otherwise specified.

### 1. INSTALL DIFFERENTIAL SIDE GEAR SHAFT OIL SEAL

- (a) Apply MP grease to 2 new oil seals.
- (b) Using SST and a hammer, tap in the 2 oil seals.

#### NOTICE:

**Make sure the LH and RH oil seals are installed in the proper locations.**

**SST 09550-00032, 09950-70010 (09951-07100)**

**Oil seal depth**

Side	Oil Seal Depth
LH side	-0.45 to 0.45 mm (-0.118 to 0.118 in.)
RH side	4.8 to 5.8 mm (0.189 to 0.229 in.)

### 2. INSTALL FRONT DRIVE SHAFT ASSEMBLY LH

(See page [DS-9](#))

