

HOW TO PROCEED WITH TROUBLESHOOTING

HINT:

- Use these procedures to troubleshoot the key reminder warning system.
- *: Use the intelligent tester.

1 VEHICLE BROUGHT TO WORKSHOP

NEXT

2 INSPECT BATTERY VOLTAGE

Standard voltage:

11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3 PROBLEM SYMPTOMS TABLE

DL Result:

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B

Go to step 5

A

4 OVERALL ANALYSIS AND TROUBLESHOOTING*

- (a) Terminals of ECU (see page [DL-70](#))
- (b) Operation Check (see page [DL-70](#))
- (c) Data list/ Active test (see page [DL-74](#))

NEXT

5 ADJUST, REPAIR OR REPLACE

NEXT

6	CONFIRMATION TEST
---	-------------------

NEXT

END
