

OPERATION CHECK

1. CHECK FUNCTION

- (a) Check that the key reminder warning buzzer sounds.
 - (1) With the driver side door closed, insert the key into the ignition key cylinder and then turn the key to LOCK or ACC.
 - (2) Check that the buzzer sounds intermittently when the driver side door is open.
- (b) Check that the key reminder warning buzzer stops.
 - (1) Check that the buzzer stops sounding if any of the following operations is performed while the buzzer is sounding:
 - Close the driver side door (front door courtesy switch is off).
 - Turn the ignition switch ON.
 - Remove the key from the ignition key cylinder.

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below to help determine the causes of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Key reminder warning system

Symptom	Suspected area	See page
Key reminder buzzer does not sound	Unlock warning switch assembly	DL-102
	Front door courtesy switch (Driver side)	LI-114
	Wire harness	-
	Combination meter assembly	ME-49
	Main body ECU	DL-70