


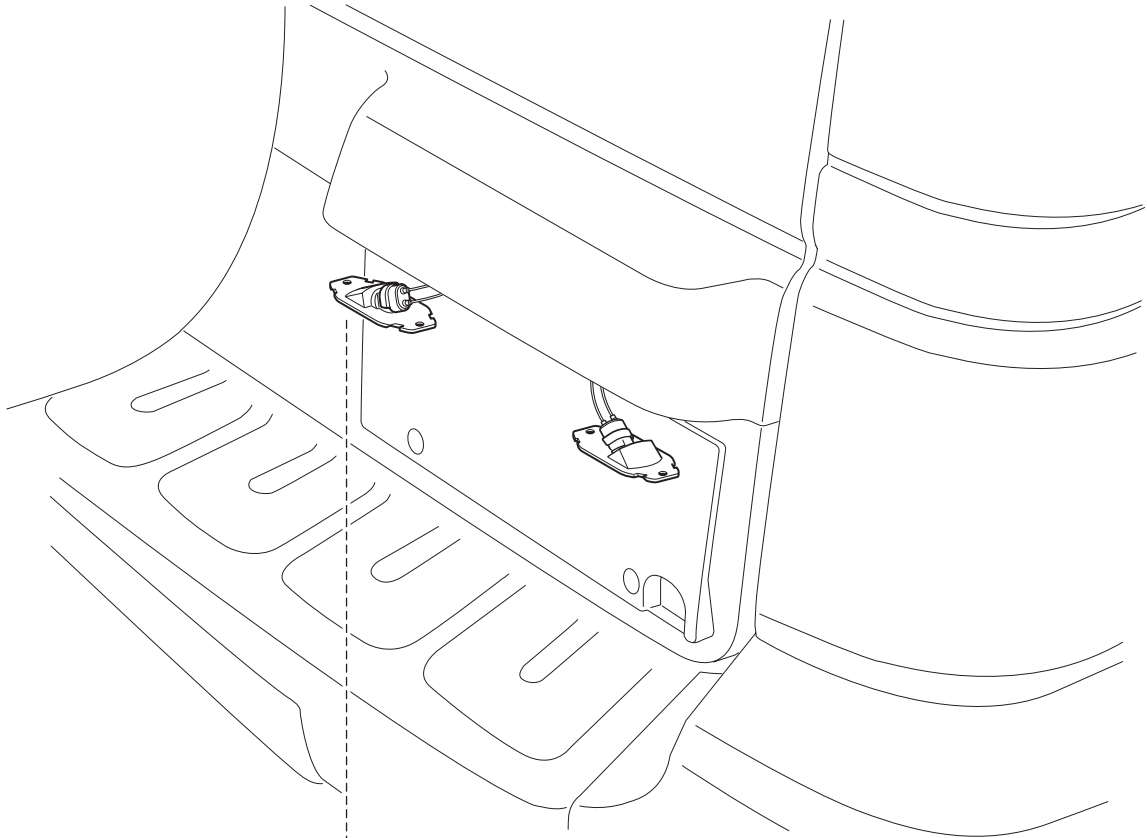

LICENSE PLATE LIGHT ASSEMBLY

COMPONENTS



 LICENSE PLATE
LIGHT BULB
x2


 LICENSE PLATE LIGHT
LENS GASKET
x2

 LICENSE PLATE
LIGHT LENS
x2


 x4

REMOVAL


1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE LICENSE PLATE LIGHT LENS**
 - (a) Remove the 2 screws and license plate light lens.

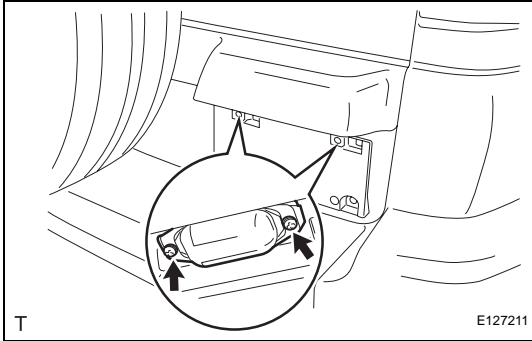

3. **REMOVE LICENSE PLATE LIGHT LENS GASKET**
 - (a) Remove the license plate light lens gasket.

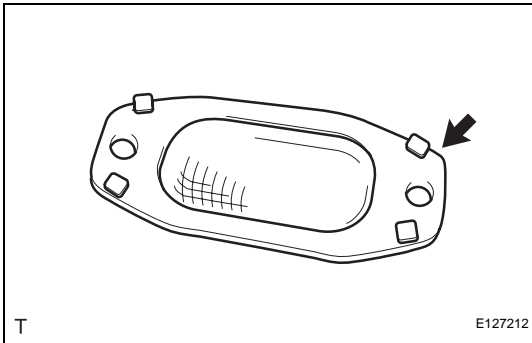



4. **REMOVE LICENSE PLATE LIGHT BULB**
 - (a) Remove the license plate light bulb from the socket.

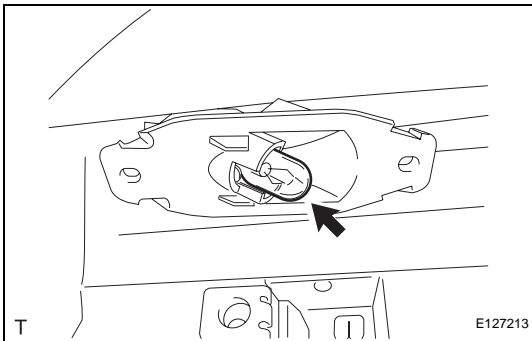


INSTALLATION

1. **INSTALL LICENSE PLATE LIGHT BULB**
 - (a) Install the license plate light bulb into the socket.

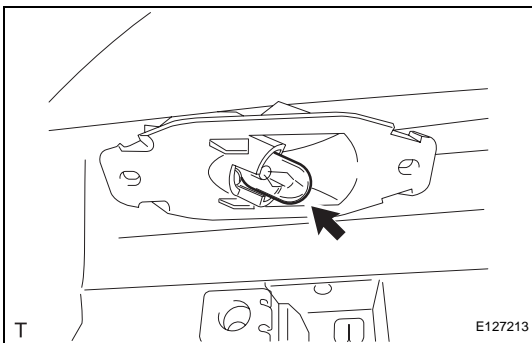

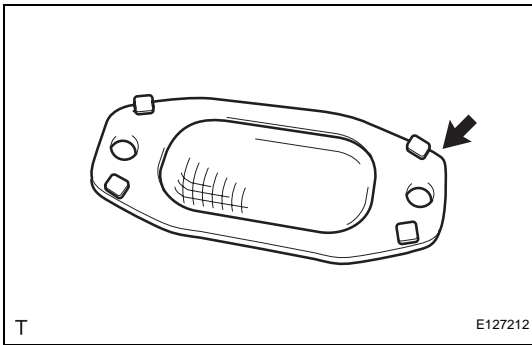

2. **INSTALL LICENSE PLATE LIGHT LENS GASKET**
 - (a) Install the license plate light lens gasket onto the license plate light lens.

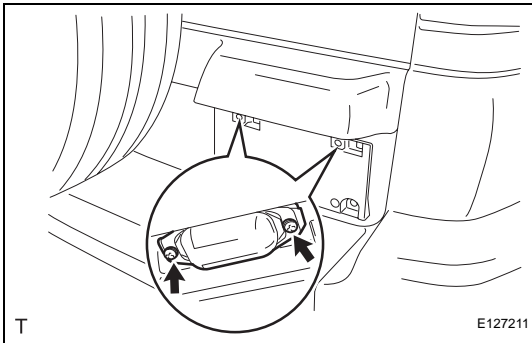

3. **INSTALL LICENSE PLATE LIGHT LENS**
 - (a) Install the license plate light lens with the 2 screws.
4. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)