

CUSTOMIZE PARAMETERS

HINT:

- When the customer requests modification of items, first make sure that the functions can be customized.
- Make a note of the current settings before customization.
- When troubleshooting items, first make sure that the functions are set to their default settings.
- The following items can be customized.

ILLUMINATED ENTRY:

Display (Item)	Default	Contents	Setting
LIGHTING TIME (Lighting Time)	15 (second)	Changes illumination duration after door closure. (It will quickly fade out in case of turning the ignition switch ON)	7.5/ 15/ 30 (second)
I/L ON / UNLOCK (Room light illuminates when door key unlocked.)	ON	Function to light up the room light, when unlocking with the door key cylinder. (Room light illuminated when room light switch in DOOR position)	ON / OFF
I/L ON / ACC OFF (Room light illuminates when ignition switch turned off)	ON	Illuminates light when ignition switch turned from ACC to LOCK. (Room light illuminated when room light switch in DOOR position)	ON / OFF

HINT:

Sensitivity adjustment can hardly be confirmed. Please check by customer's actual driving.

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below to help determine the causes of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Headlight and taillight system

Symptom	Suspected area	See page
Neither headlight comes on. (w/o Daytime running light system)	Headlight relay circuit	LI-25
	Light control switch circuit	LI-47
	Harness or connector	-
	Main body ECU	-
Neither headlight comes on. (w/ Daytime running light system)	Headlight relay circuit	LI-25
	DRL Relay circuit	LI-28
	Light control switch circuit	LI-47
	Harness or connector	-
	Main body ECU	-
Only one headlight comes on.	Bulb	-
	HEAD fuse	-
	Harness or connector	-
LO-Beam lights do not come on.	Bulb	-
	Light control switch circuit	LI-47
	HEAD fuse	-
	DIM relay (w/ Daytime running light system)	LI-126
	Harness or connector	-
	Main body ECU	-
HI-Beam lights do not come on.	Bulb	-
	Light control switch circuit	LI-47
	HEAD fuse	-
	DIM relay (w/ Daytime running light system)	LI-126
	Harness or connector	-
	Main body ECU	-
No taillights come on. (Headlights normal)	Taillight relay circuit	LI-61
	Harness or connector	-
Only one taillight comes on.	Bulb	-
	Taillight relay circuit	LI-61
	Harness or connector	-
License plate light does not come on.	Taillight relay circuit	LI-61
	Harness or connector	-

Daytime running light system

Symptom	Suspected area	See page
Day time running light system does not operate	DRL Relay circuit	LI-28
	Light control switch circuit	LI-47
	Parking brake switch	PB-24
	Harness or connector	-
	Main body ECU	-

Stop light system

Symptom	Suspected area	See page
No stop lights come on.	Stop light switch circuit	LI-20
	Harness or connector	-
Only one stop light does not come on.	Bulb	-
	Stop light switch circuit	LI-20
	Harness or connector	-
High mounted stop light does not come on.	Stop light switch circuit	LI-20
	Harness or connector	-

Turn signal light system

Symptom	Suspected area	See page
No turn signal lights come on.	Turn signal light circuit	LI-32
	Harness or connector	-
Only one turn signal light does not come on.	Bulb	-
	Turn signal light circuit	LI-32
	Harness or connector	-

Hazard warning light system

Symptom	Suspected area	See page
Hazard warning light does not operate (Turn signal normal)	Hazard warning switch circuit	LI-38
	Harness or connector	-

Room light system

Symptom	Suspected area	See page
Room light assembly does not come on.	Bulb	-
	DOME Relay	-
	Illumination circuit	LI-58
	Door courtesy switch circuit	LI-51
	Harness or connector	-

Light auto turn off system

Symptom	Suspected area	See page
Light auto turn off system does not operate	Unlock warning switch	DL-102
	Headlight relay circuit	LI-25
	Door courtesy switch circuit	LI-51
	Harness or connector	-

