

INSTALLATION

1. **INSTALL TAILLIGHT RELAY**
 - (a) Install the taillight relay onto the main body ECU.
2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
TERMINAL
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

