


# TAILLIGHT RELAY


## COMPONENTS

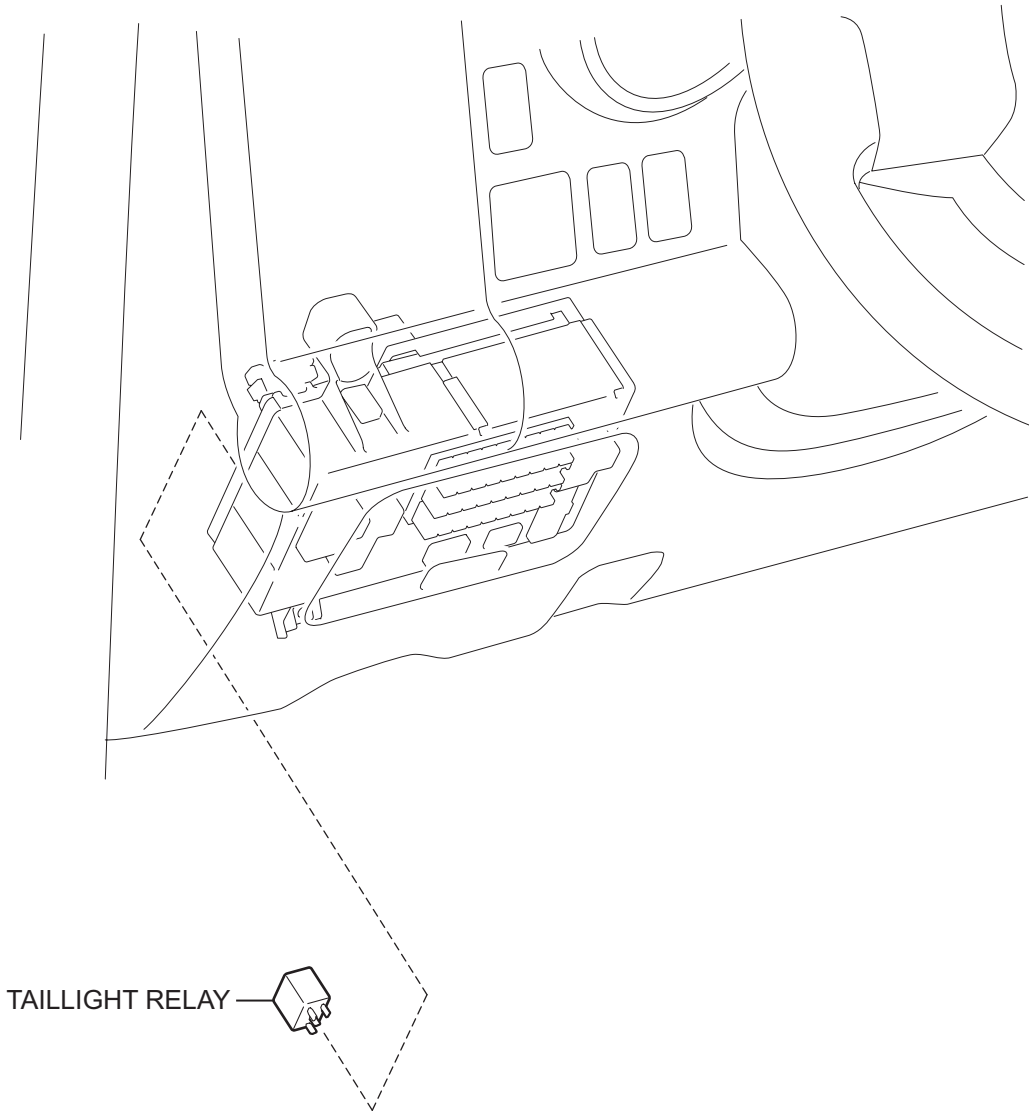

LI

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE TAILLIGHT RELAY**
  - (a) Remove the taillight relay from the main body ECU.

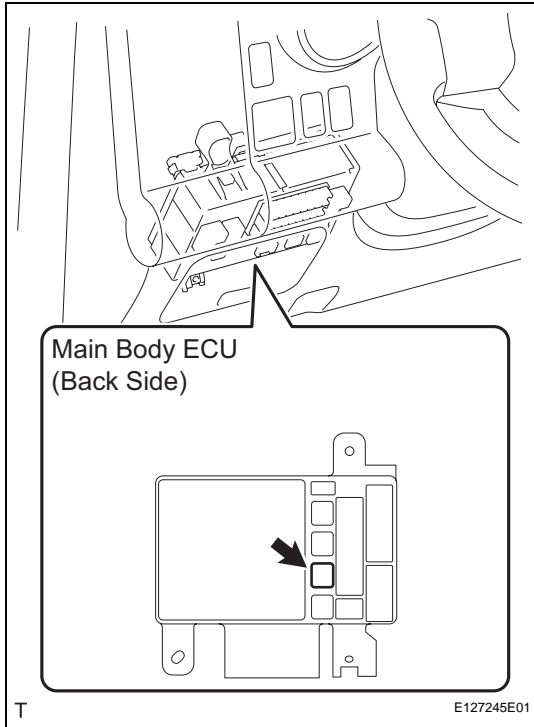

## INSPECTION

1. **INSPECT TAILLIGHT RELAY**
  - (a) Check the resistance.
    - (1) Using an ohmmeter, measure the resistance between the terminals.

### Standard Resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

If result is not as specified, replace the taillight relay.

