


INSTALLATION

1. INSTALL REAR DISC

- Align the matchmarks of the disc and axle hub and install the disc.

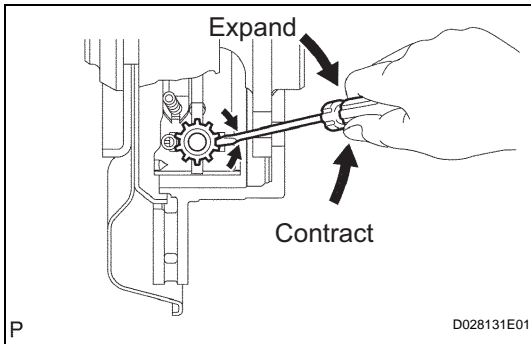


2. ADJUST PARKING BRAKE SHOE CLEARANCE

- Provisionally install the 2 hub nuts.
- Remove the hole plug, and turn the adjuster to expand the shoe until the disc locks.
- Contract the shoe adjuster until the disc rotates smoothly.

Standard:

Return 8 notches

- Install the hole plug.

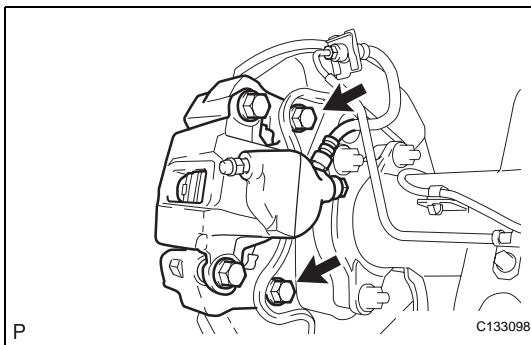

3. INSTALL REAR DISC BRAKE CALIPER ASSEMBLY

- Install the disc brake caliper with the 2 bolts and 2 washers.

Torque: 105 N*m (1,071 kgf*cm, 78 ft.*lbf)

4. INSTALL REAR WHEEL

Torque: 112 N*m (1,137 kgf*cm, 82 ft.*lbf)

5. INSPECT PARKING BRAKE LEVER TRAVEL (See page [PB-4](#))

6. ADJUST PARKING BRAKE LEVER TRAVEL (See page [PB-4](#))