

 

 

 
 


 














RA61F MANUAL TRANSMISSION

SST

	09023-00101	Union Nut Wrench 10 mm	
	09308-00010	Oil Seal Puller	
	09308-14010	Replacer Pipe A	
	09309-37010	Transmission Bearing Replacer	
	09316-60011	Transmission & Transfer Bearing Replacer	
	(09316-00011)	Replacer Pipe	
	09556-16030	Differential Drive Pinion Holding Tool 28	
	09608-06041	Front Hub Inner Bearing Cone Replacer	
	09817-16011	Back-up Light Switch Tool	
	09950-00020	Bearing Remover	
	09950-60010	Replacer Set	

PP

	(09951-00300)	Replacer 30	
	(09951-00320)	Replacer 32	
	(09951-00470)	Replacer 47	
	(09951-00510)	Replacer 51	
	(09951-00540)	Replacer 54	
	(09951-00650)	Replacer 65	
	09950-60020	Replacer Set No.2	
	(09951-00790)	Replacer 79	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	
	(09951-07200)	Handle 200	
	(09951-07360)	Handle 360	