 



 
 


 
 

 
 




# STEERING COLUMN

## SST

PP

	<p>09316-60011</p>	<p>Transmission &amp; Transfer Bearing Replacer</p>	
	<p>(09316-00051)</p>	<p>Replacer D</p>	
	<p>09921-00010</p>	<p>Spring Tension Tool</p>	
	<p>09950-40011</p>	<p>Puller B Set</p>	
	<p>(09951-04010)</p>	<p>Hanger 150</p>	
	<p>(09952-04010)</p>	<p>Slide Arm</p>	
	<p>(09953-04020)</p>	<p>Center Bolt 150</p>	
	<p>(09954-04010)</p>	<p>Arm 25</p>	
	<p>(09955-04061)</p>	<p>Claw No.6</p>	
	<p>(09958-04011)</p>	<p>Holder</p>	
	<p>09950-50013</p>	<p>Puller C Set</p>	

	(09951-05010)	Hanger 150	
	(09952-05010)	Slide Arm	
	(09953-05020)	Center Bolt 150	
	(09954-05021)	Claw No.2	