


CURTAIN SHIELD AIRBAG ASSEMBLY

COMPONENTS

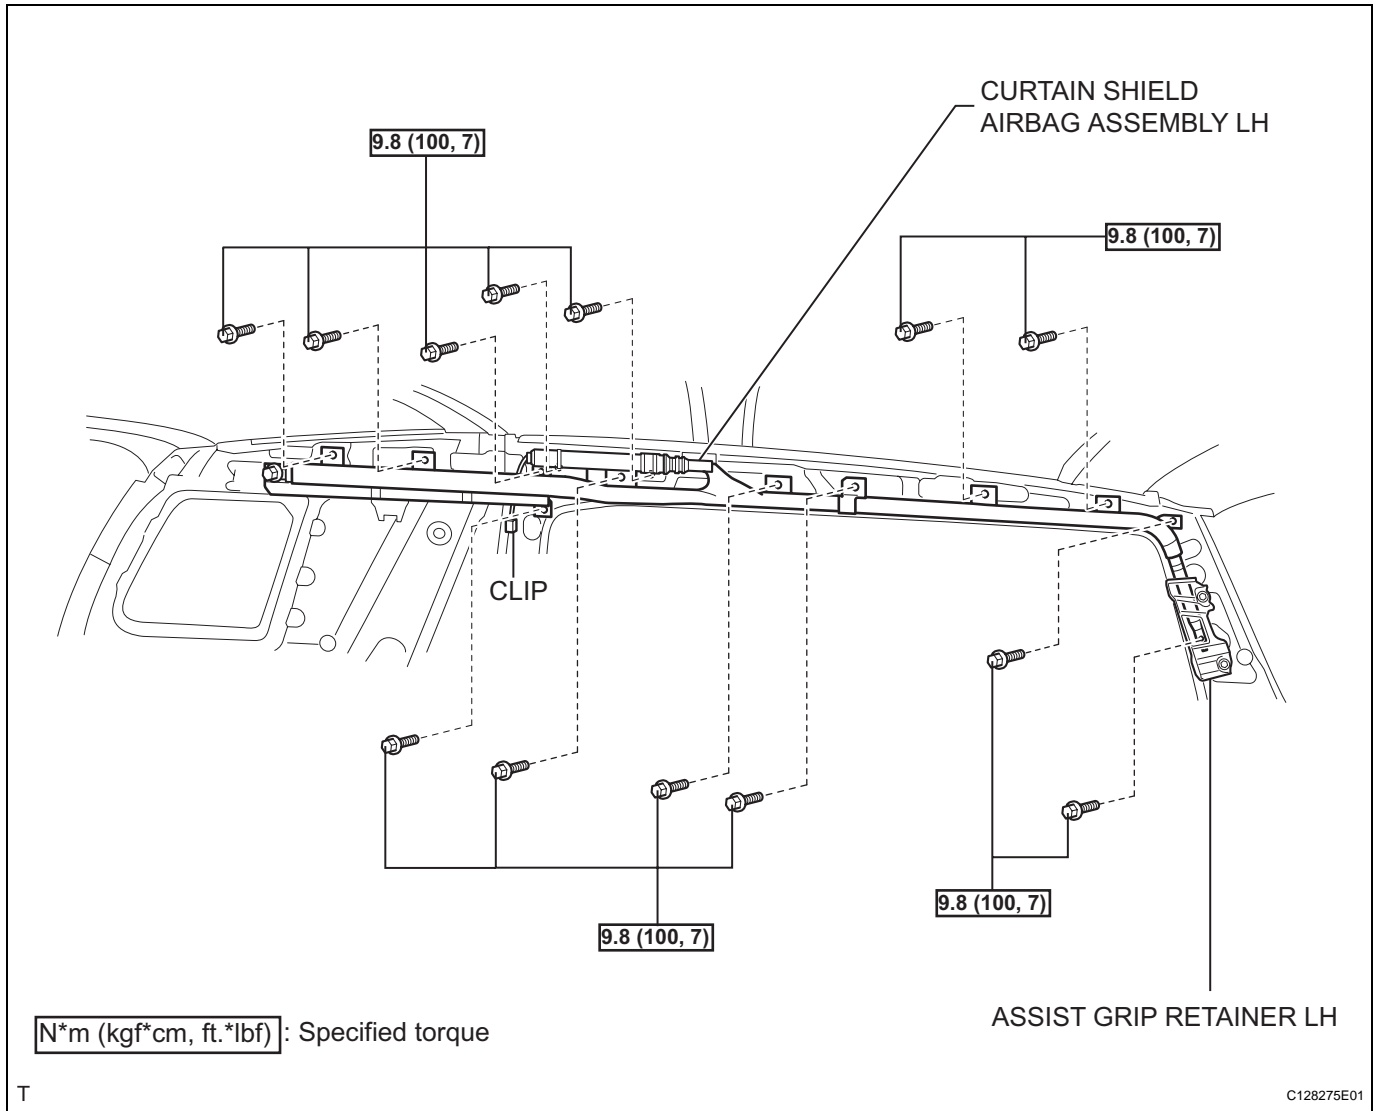

RS


T

C128275E01

ON-VEHICLE INSPECTION


1. INSPECT CURTAIN SHIELD AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

- (a) Perform a diagnostic system check (See page [RS-36](#)).
- (b) With the curtain shield airbag assembly installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front pillar garnish or roof headlining assembly with a new one: Cuts, minute cracks or marked discoloration on the front pillar garnish or roof headlining assembly around the curtain shield airbag assembly.

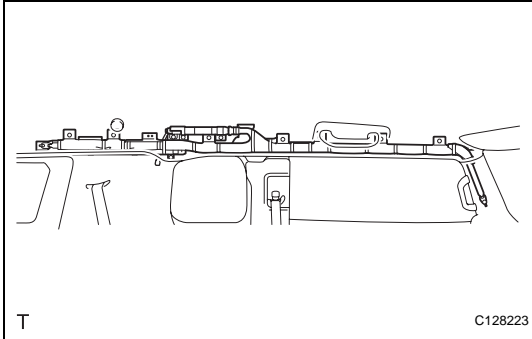

2. INSPECT CURTAIN SHIELD AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)

- (a) Perform a diagnostic system check (See page [RS-36](#)).
- (b) With the curtain shield airbag assembly removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the curtain shield airbag assembly with a new one:
 - Cuts, minute cracks or marked discoloration on the curtain shield airbag assembly.
 - Cracks or other damage to the wire harness or connector.

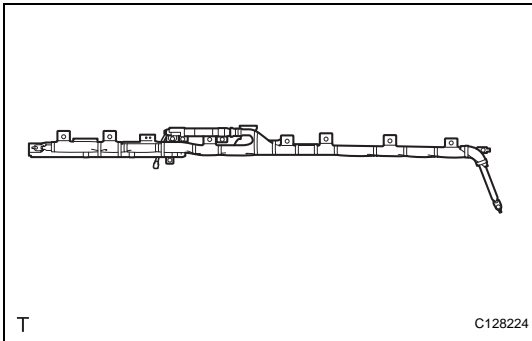

CAUTION:

For curtain shield airbag removal and installation procedures, see pages RS-278 and RS-282. Be sure to follow the correct procedure.