

INSTALLATION

HINT:

The procedure described below is for the LH side. Use the same procedure for both the LH and RH sides, unless otherwise specified.

1. PRECAUTION

CAUTION:

Read "PRECAUTION" thoroughly before servicing (See page [RS-1](#)).



2. INSTALL REAR AIRBAG SENSOR LH

- Check that the ignition switch is turned to OFF.
- Check that the battery negative (-) terminal is disconnected.

CAUTION:

After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.

- Connect the connector to the rear airbag sensor LH.

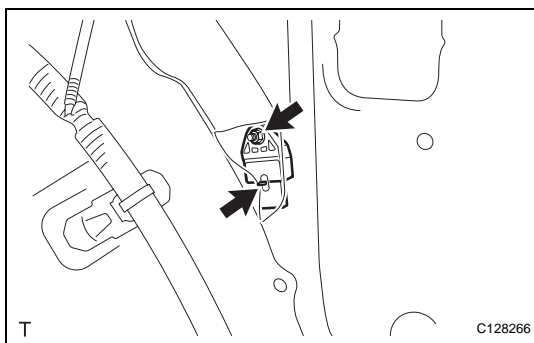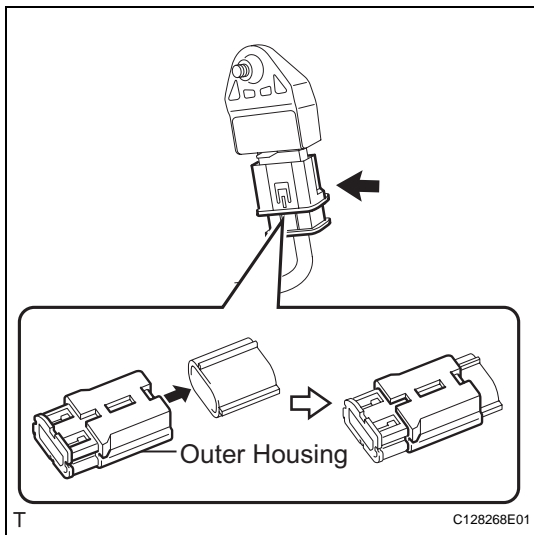

- Install the rear airbag sensor LH with the nut.

Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)

CAUTION:

- If the rear airbag sensor LH has been dropped, or there are any cracks, dents or other defects in the case or connector, replace it with a new one.
- When installing the rear airbag sensor LH, make sure that the SRS wiring does not interfere with any other parts and that it is not pinched between other parts.

- Check that there is no looseness in the installation parts of the rear airbag sensor LH.

3. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (for RH Side) (See page [IR-39](#))

4. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (See page [IR-39](#))

5. INSTALL REAR DECK TRIM COVER (w/ Power Outlet Socket) (See page [IR-40](#))
6. INSTALL REAR SEAT OUTER BELT ASSEMBLY LH (See page [SB-59](#))
7. INSTALL LAP BELT OUTER ANCHOR COVER (See page [SB-61](#))
8. INSTALL QUARTER TRIM POCKET (w/o Woofer) (for RH Side) (See page [IR-41](#))
9. INSTALL SIDE TRIM COVER (w/o Woofer) (for RH Side) (See page [IR-42](#))
10. INSTALL QUARTER TRIM POCKET TRAY (w/o Woofer) (for RH Side) (See page [IR-42](#))
11. INSTALL PACKAGE HOLDER NET HOOK (See page [IR-42](#))
12. INSTALL AMPLIFIER BOX SPEAKER ASSEMBLY (w/ Woofer) (See page [AV-90](#))
13. INSTALL SPEAKER MOUNTING COVER (w/ Woofer) (See page [AV-91](#))
14. INSTALL DECK SIDE GARNISH (w/ Woofer) (See page [IR-41](#))
15. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (See page [IR-44](#))
16. INSTALL ACCESS DOOR SCUFF PLATE LH (See page [IR-45](#))
17. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-45](#))
18. INSTALL REAR FLOOR MAT ASSEMBLY (See page [IR-46](#))
19. INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY (See page [IR-46](#))
20. INSTALL REAR FLOOR MAT SUPPORT PLATE (See page [IR-46](#))
21. INSTALL REAR FLOOR BOARD (See page [IR-47](#))
22. INSTALL REAR SEATBACK ASSEMBLY LH (See page [SE-38](#))
23. INSTALL REAR SEATBACK BOARD CARPET ASSEMBLY LH (See page [SE-38](#))
24. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

25. PERFORM INITIALIZATION

- (a) Perform initialization (See page [IN-31](#)).

HINT:

Some systems need initialization when disconnecting the cable from the negative battery terminal.

26. INSPECT SRS WARNING LIGHT

- (a) Inspect the SRS warning light (See page [RS-29](#)).