


REMOVAL

1. **PRECAUTION**
CAUTION:
Read "PRECAUTION" thoroughly before servicing
(See page [RS-1](#)).
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
3. **REMOVE FRONT SEAT ASSEMBLY LH** (See page [SE-6](#))
4. **REMOVE SEAT POSITION SENSOR**
 - (a) Disconnect the connector from the seat position sensor.
 - (b) Remove the bolt and the seat position sensor.

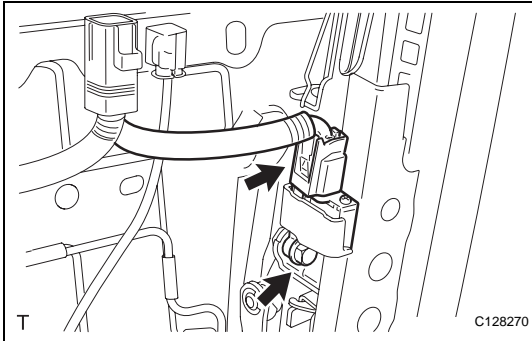

RS

INSTALLATION

1. PRECAUTION

CAUTION:

Read "PRECAUTION" thoroughly before servicing (See page [RS-1](#)).

2. INSTALL SEAT POSITION SENSOR

- Check that the ignition switch is turned to OFF.
- Check that the negative (-) battery terminal is disconnected.

CAUTION:

After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.

- Install the seat position sensor with the bolt.
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
- Check that there is no looseness in the installation parts of the seat position sensor.
- Connect the connector to the seat position sensor.

3. INSTALL FRONT SEAT ASSEMBLY LH (See page [SE-24](#))

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

5. PERFORM INITIALIZATION

- Perform initialization (See page [IN-31](#)).

HINT:

Some systems need initialization when disconnecting the cable from the negative battery terminal.

6. INSPECT SRS WARNING LIGHT

- Inspect the SRS warning light (See page [RS-29](#)).

