



TRANSFER ASSEMBLY


COMPONENTS

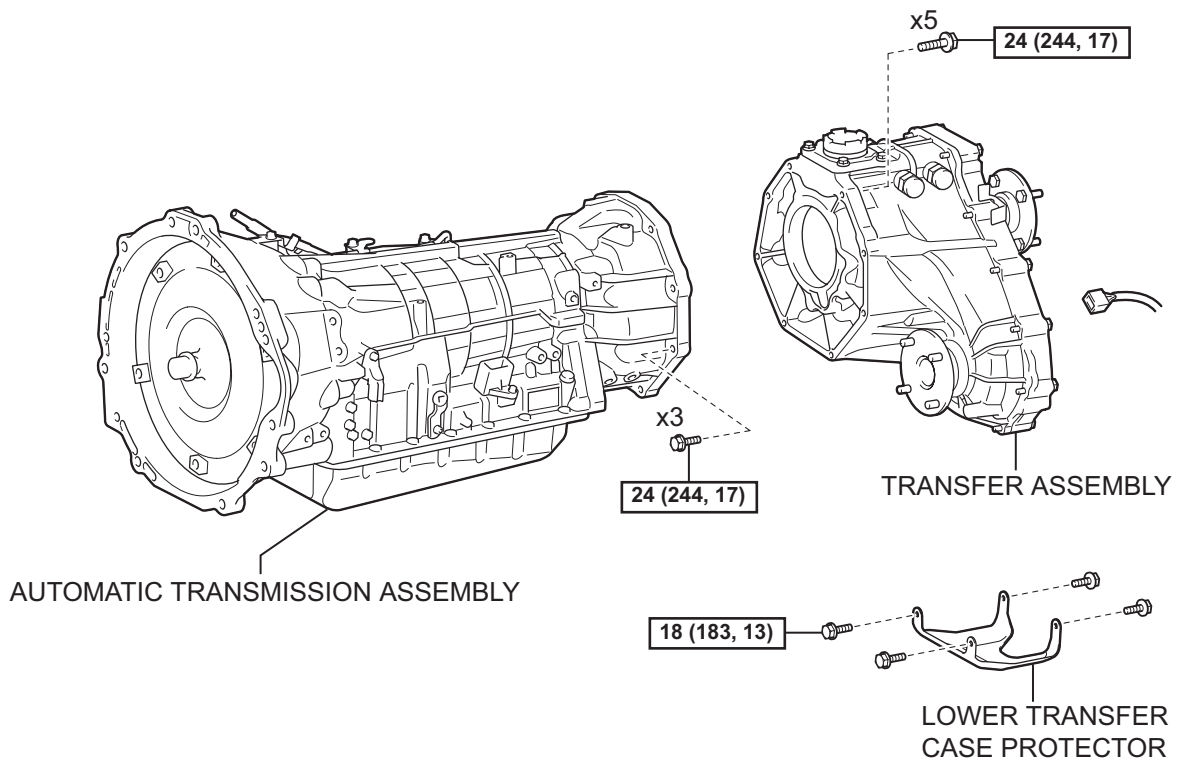

N*m (kgf*cm, ft*lbf) : Specified torque

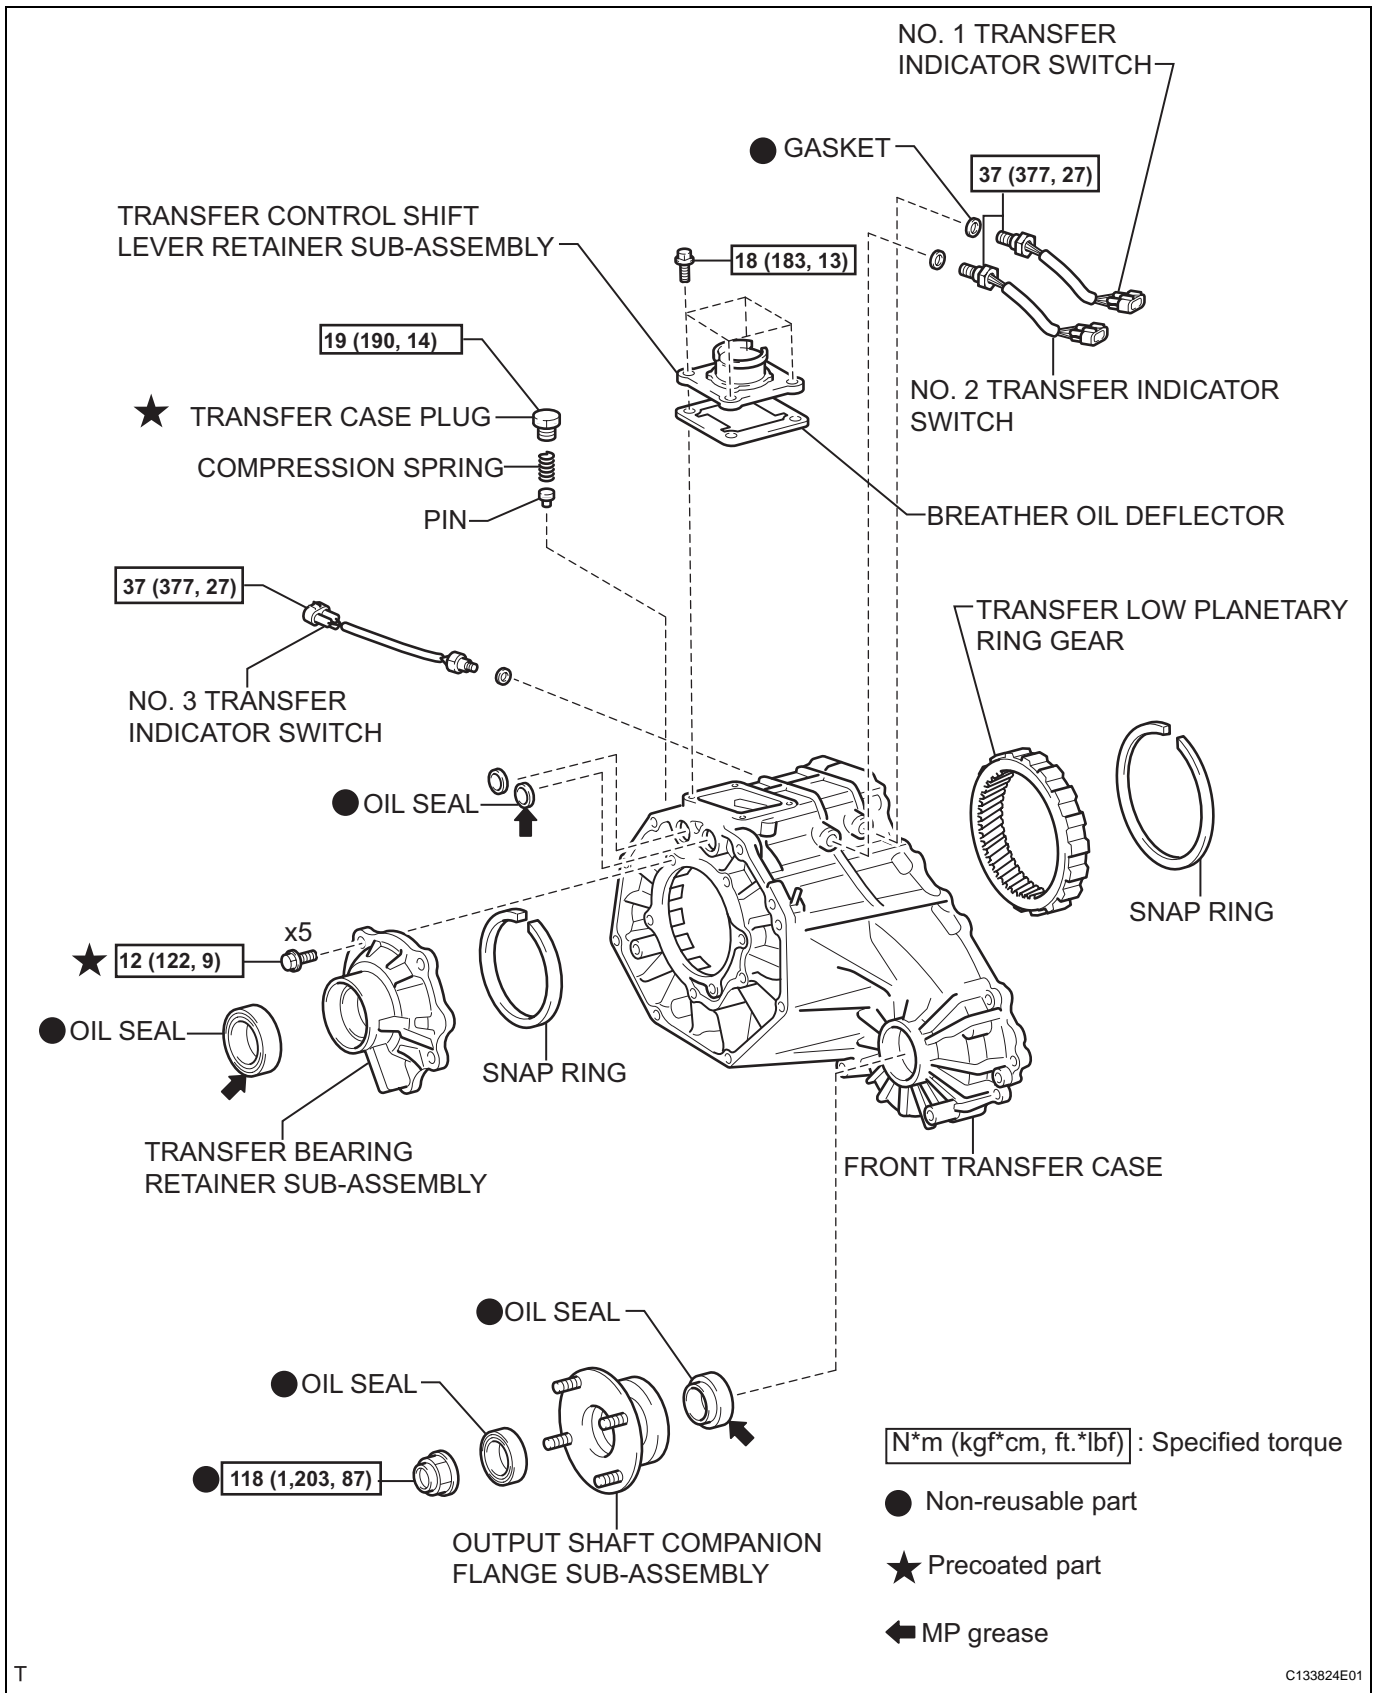


TF

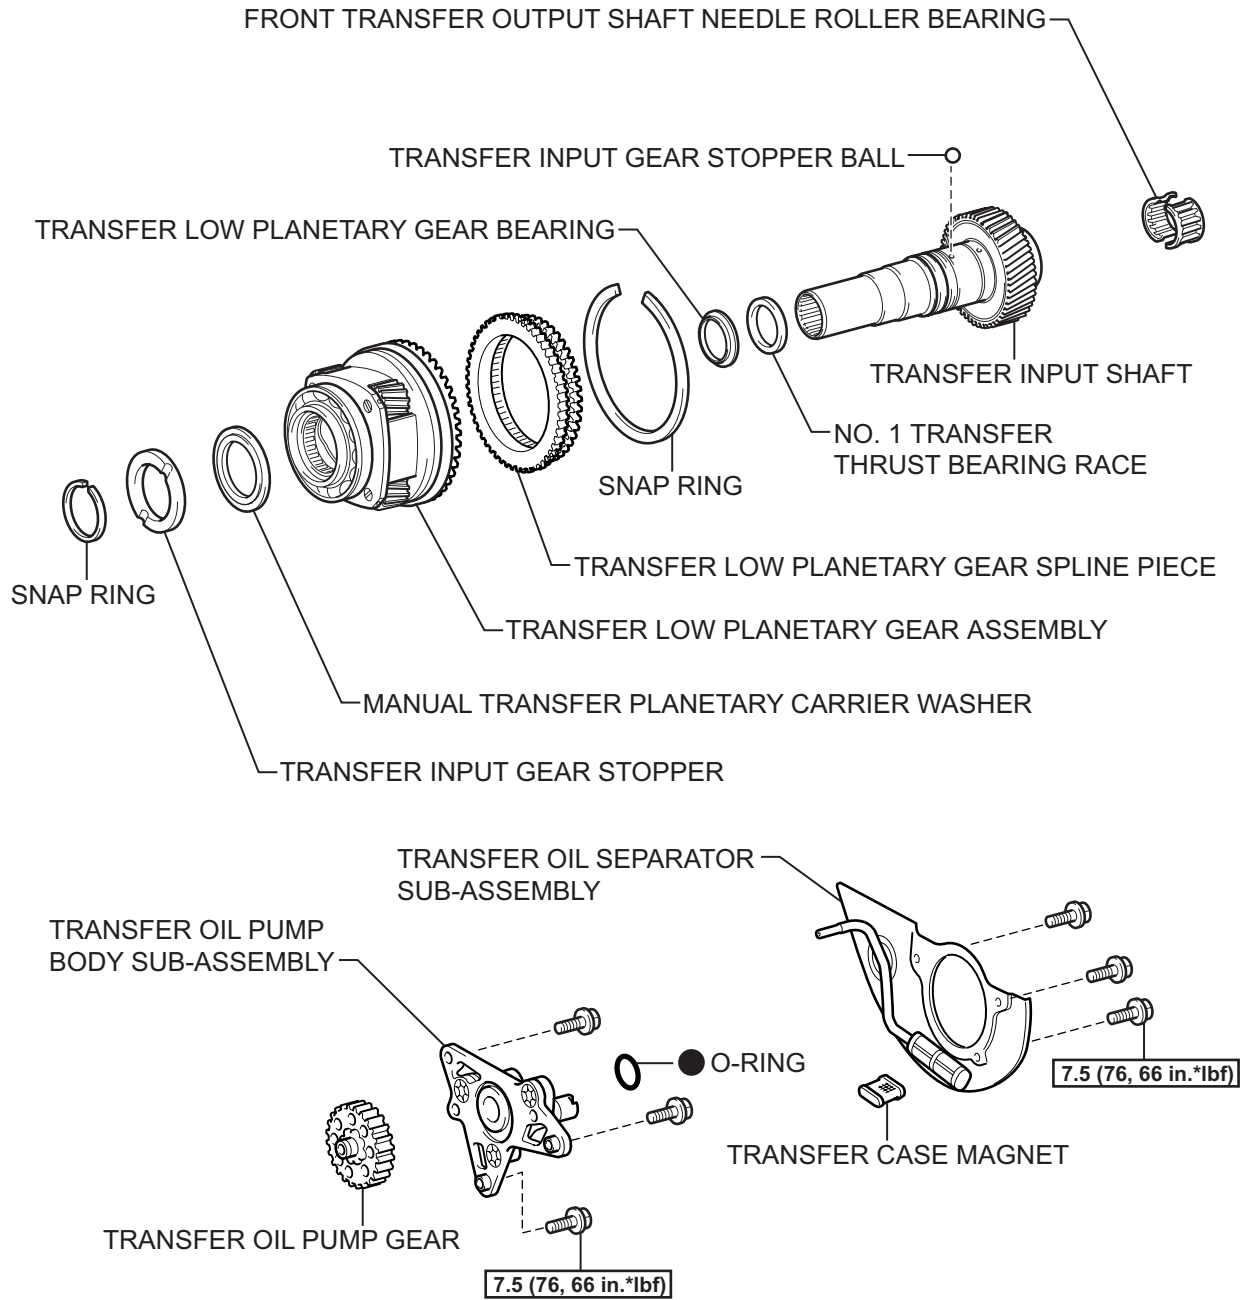


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

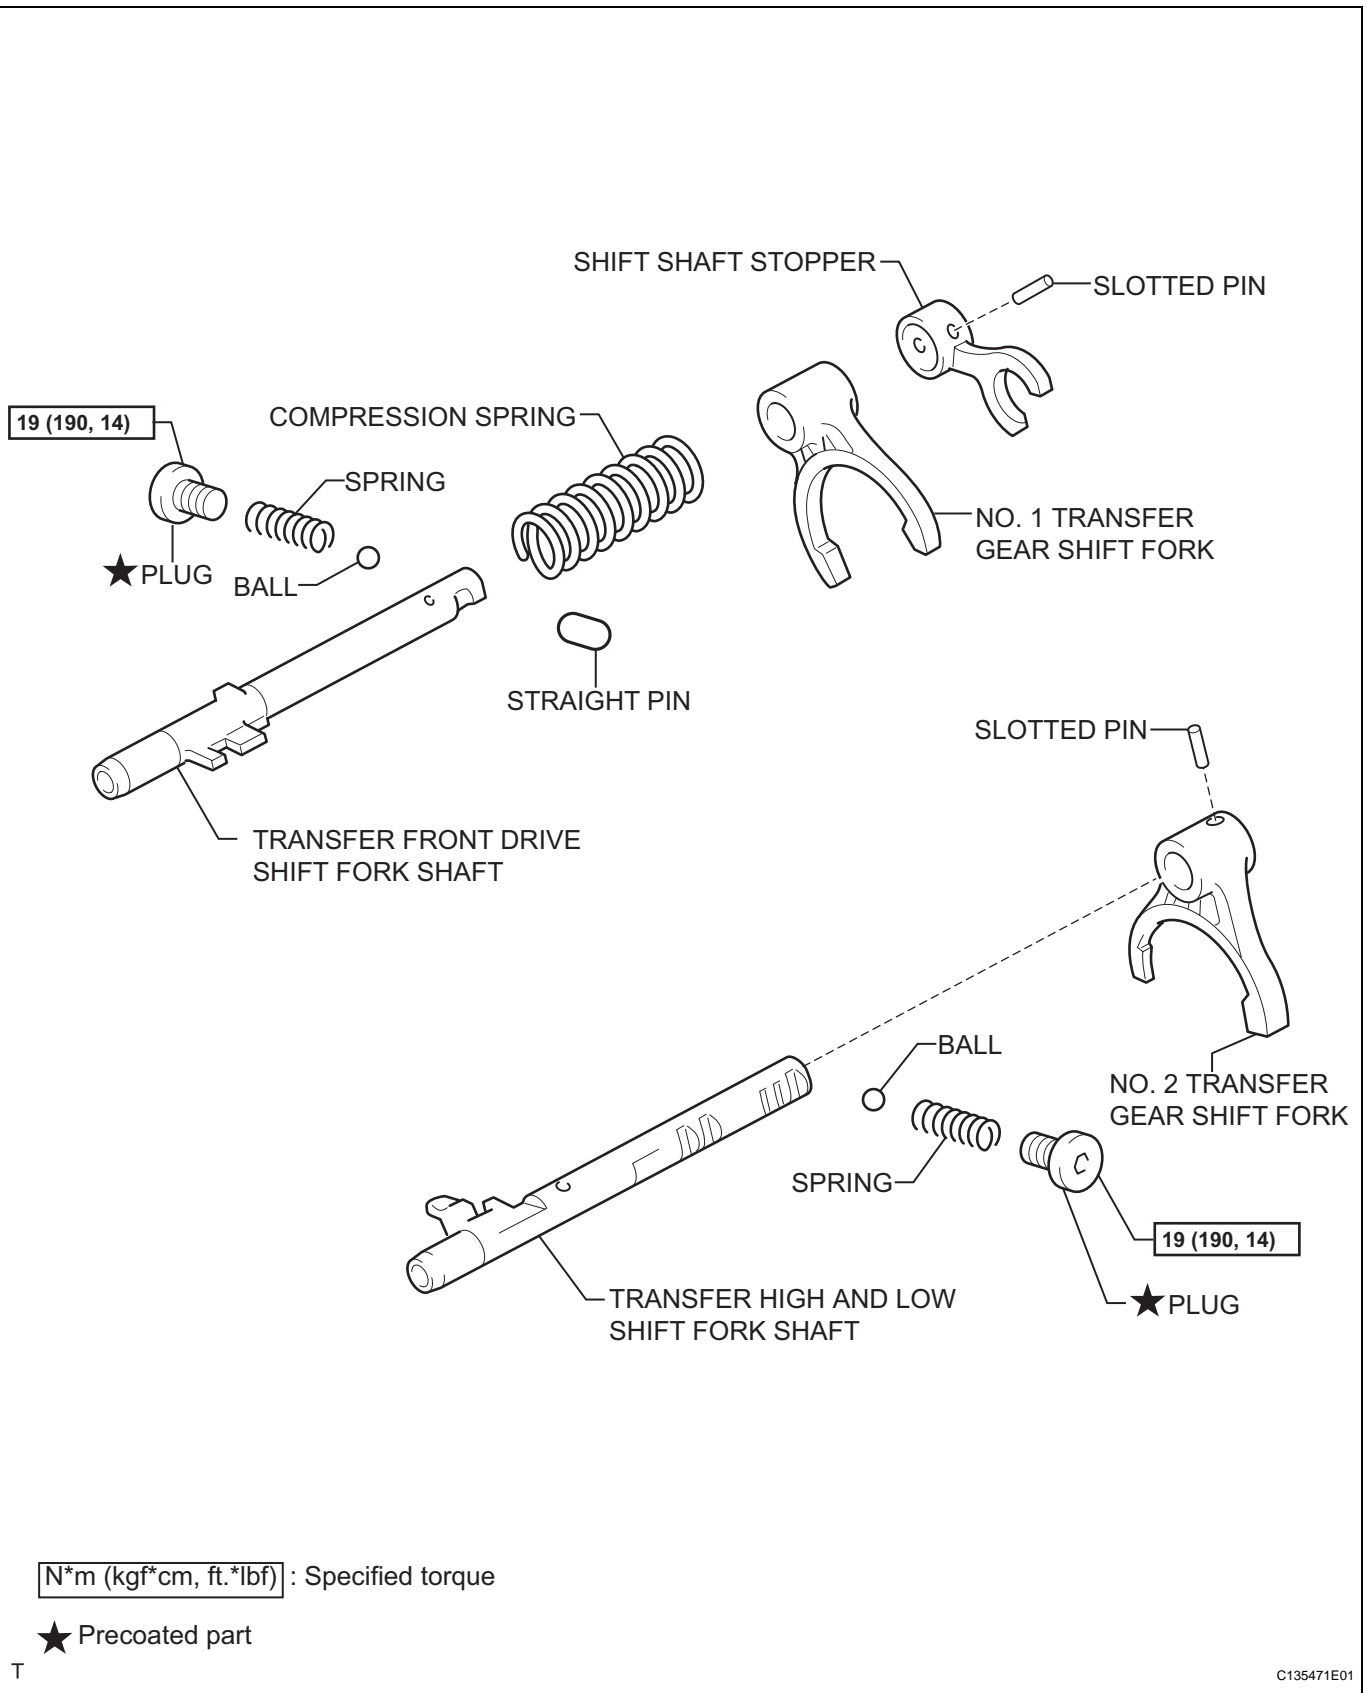

TF


T

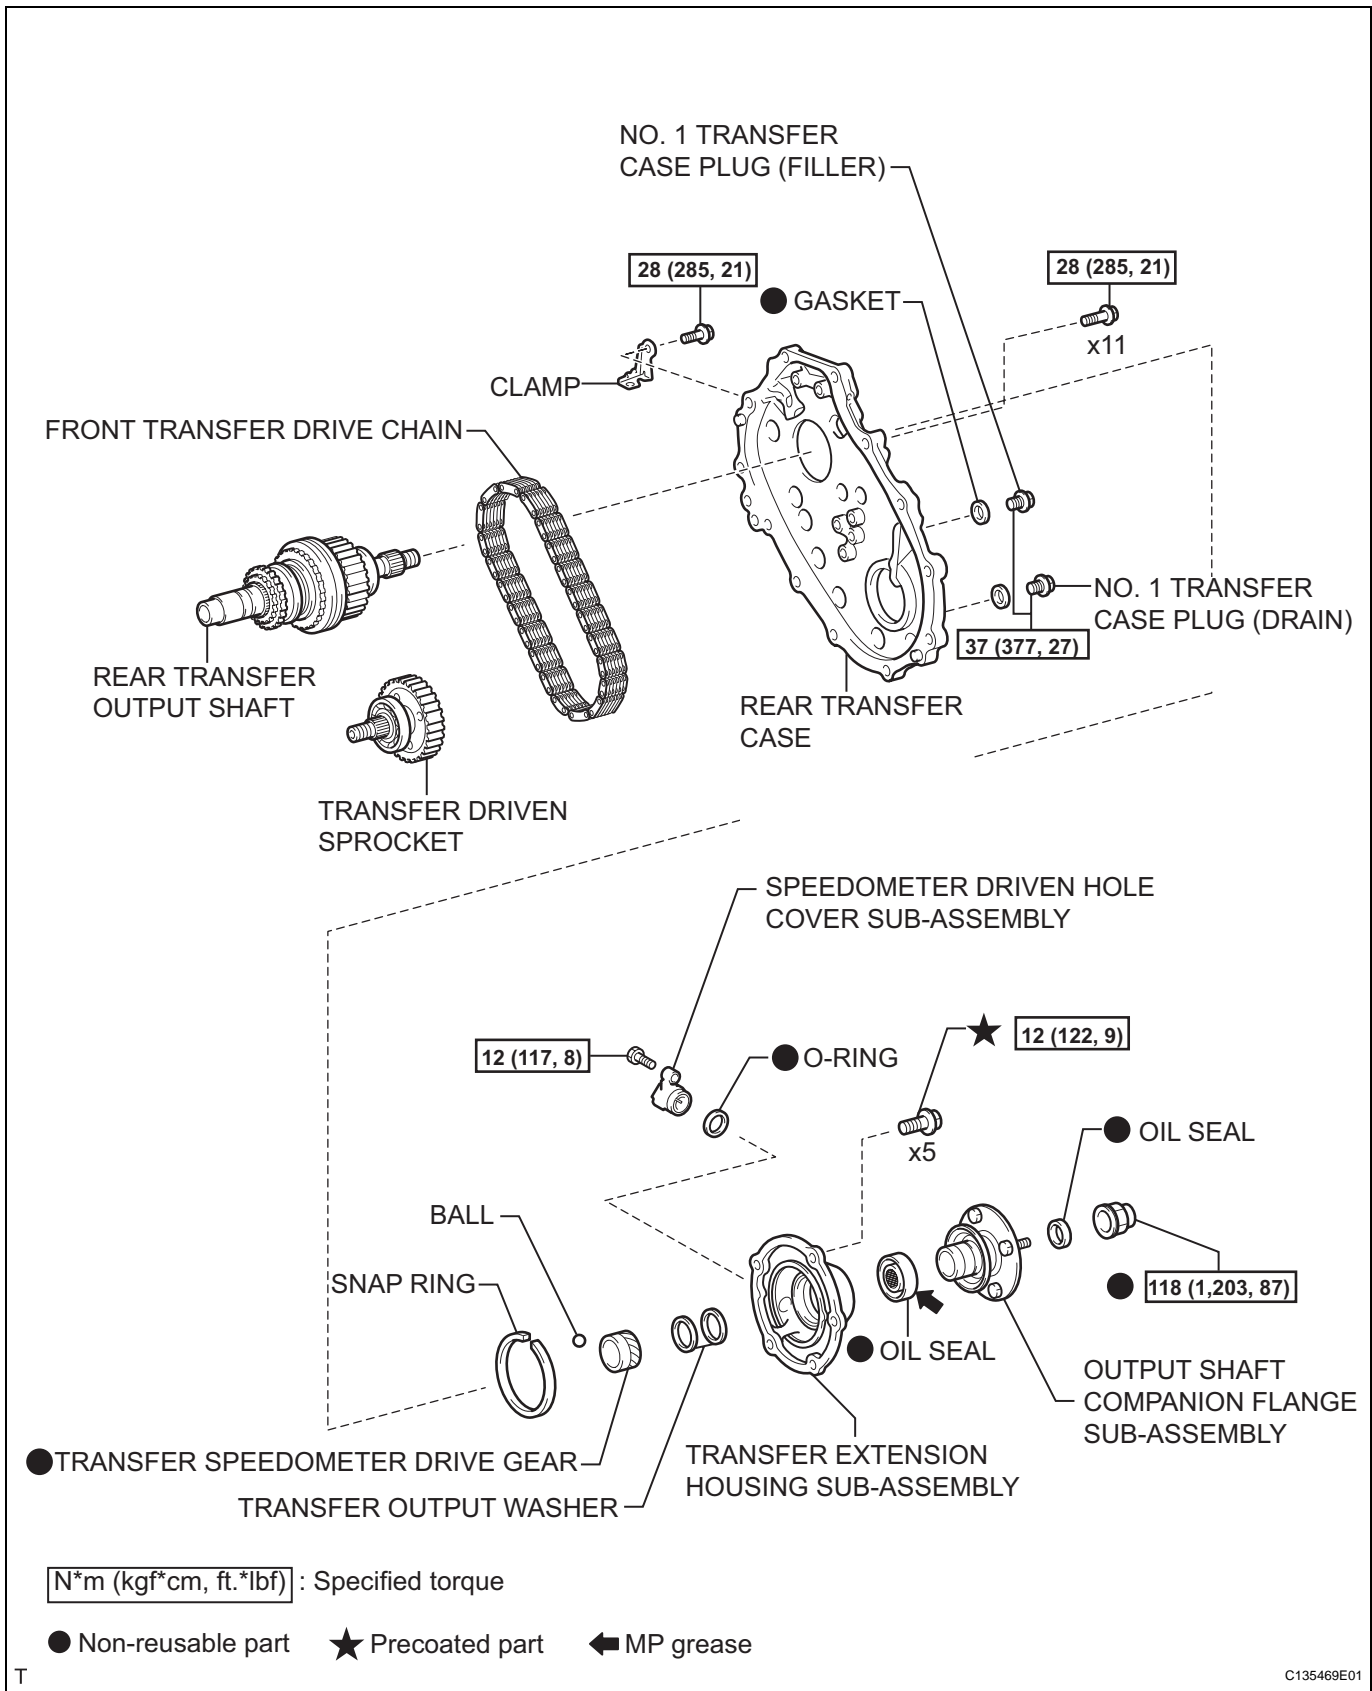


TF

T



TRANSFER HIGH AND LOW CLUTCH SLEEVE

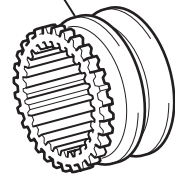

FRONT TRANSFER DRIVE CLUTCH SYNCHRONIZER RING

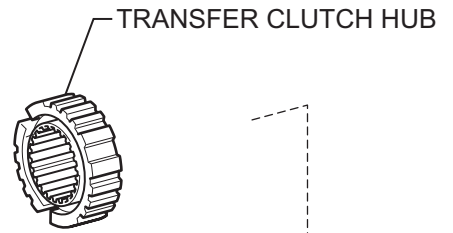

TRANSFER CLUTCH HUB

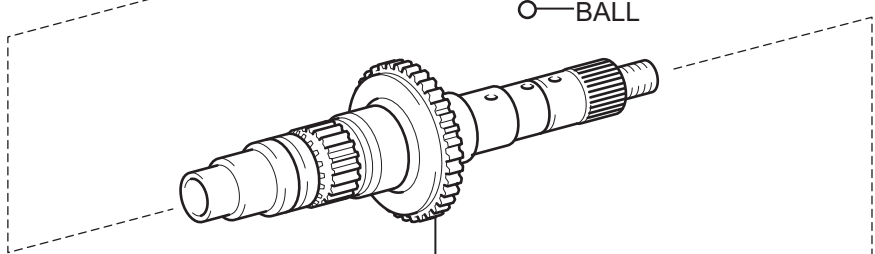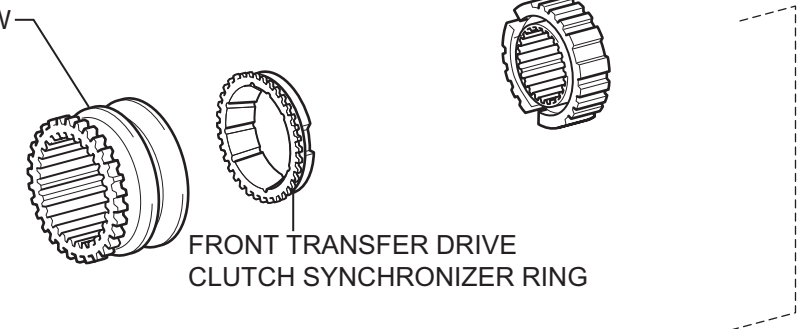

REAR TRANSFER OUTPUT SHAFT

● REAR TRANSFER OUTPUT SHAFT RADIAL BALL BEARING

NEEDLE ROLLER BEARING

SHIFTING KEY SPRING


FRONT DRIVE CLUTCH SLEEVE

SHIFTING KEY

TRANSFER DRIVE SPROCKET SUB-ASSEMBLY

SPACER

FRONT DRIVE SYNCHRONIZER RING

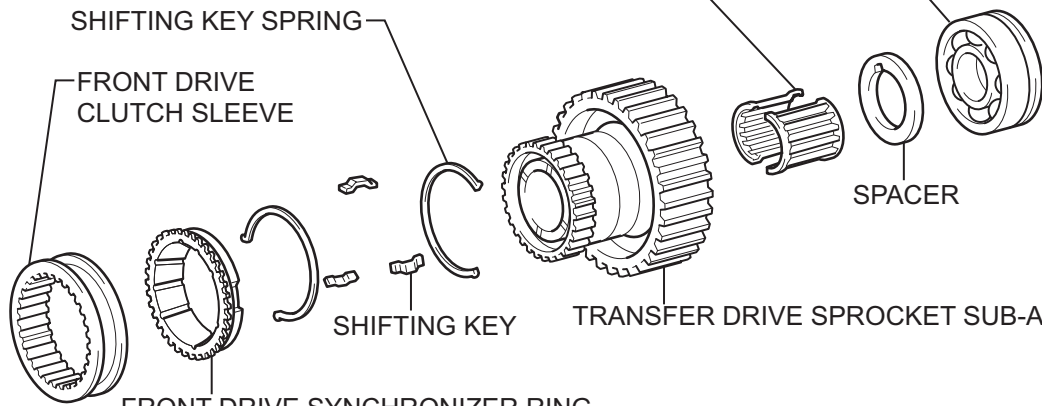


● Non-reusable part

T

C135472E01

TF

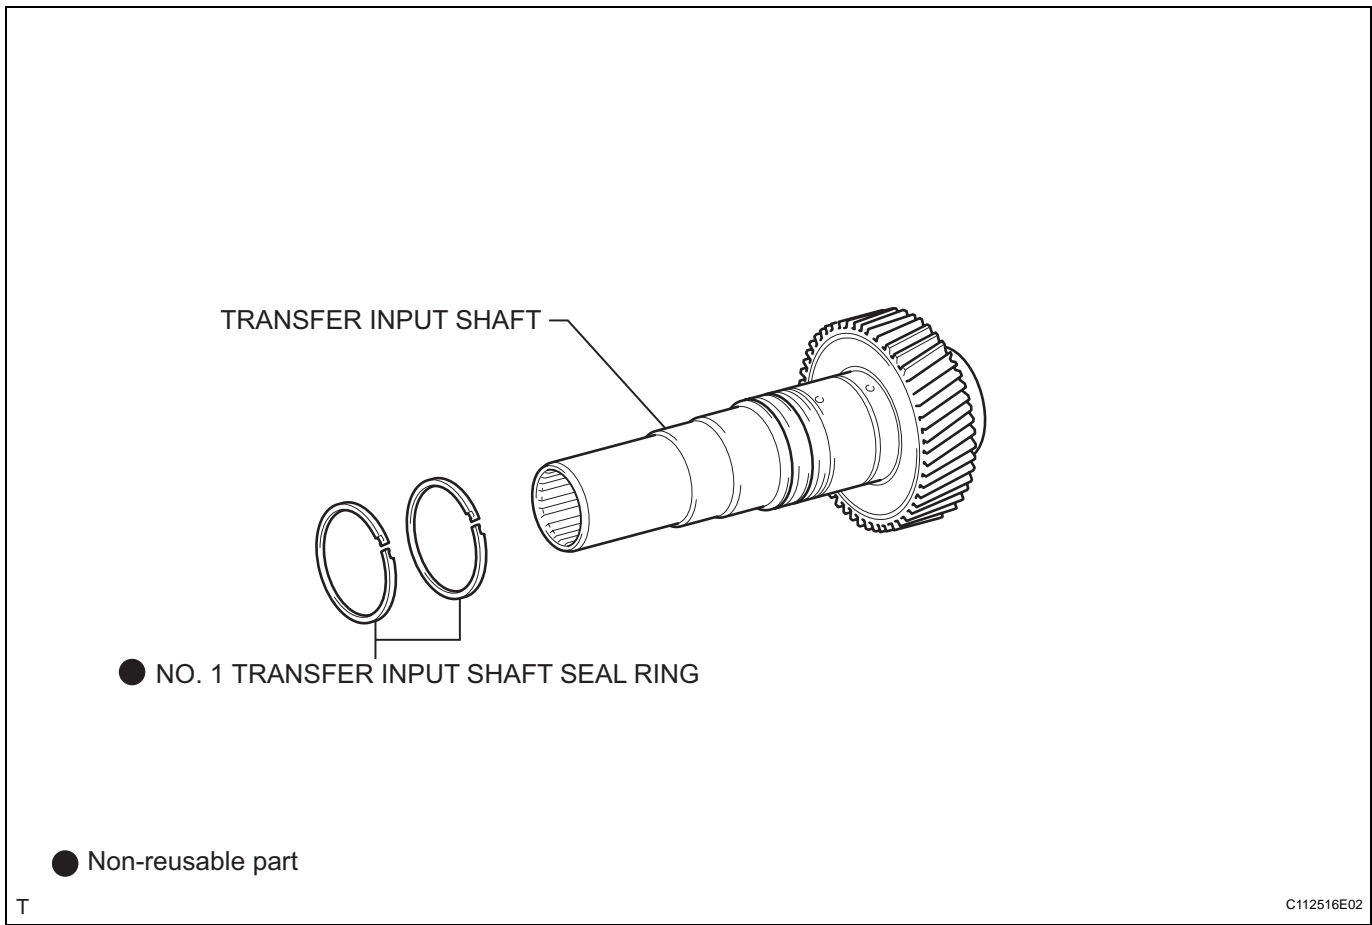

TF

