


INSTALLATION

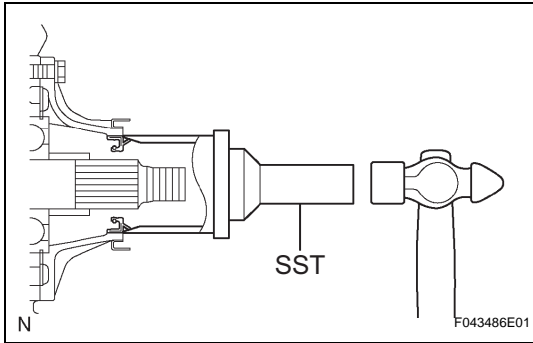

- 1. INSTALL EXTENSION HOUSING OIL SEAL**
 - (a) Coat the lip of a new oil seal with MP grease.
 - (b) Using SST and a hammer, tap in the oil seal until its surface is flush with the housing upper surface.
SST 09316-60011 (09316-00011)
- 2. INSTALL TRANSFER OUTPUT SHAFT COMPANION FLANGE OIL SEAL (See page [TF-41](#))**
- 3. INSTALL OUTPUT SHAFT COMPANION FLANGE SUB-ASSEMBLY (See page [TF-42](#))**
- 4. INSTALL REAR PROPELLER SHAFT ASSEMBLY (See page [PR-9](#))**
- 5. INSTALL LOWER TRANSFER CASE PROTECTOR (See page [TF-8](#))**
- 6. ADD TRANSFER OIL (See page [TF-6](#))**
- 7. CHECK FOR TRANSFER OIL LEAKAGE (See page [TF-6](#))**