


EXTENSION HOUSING OIL SEAL

COMPONENTS

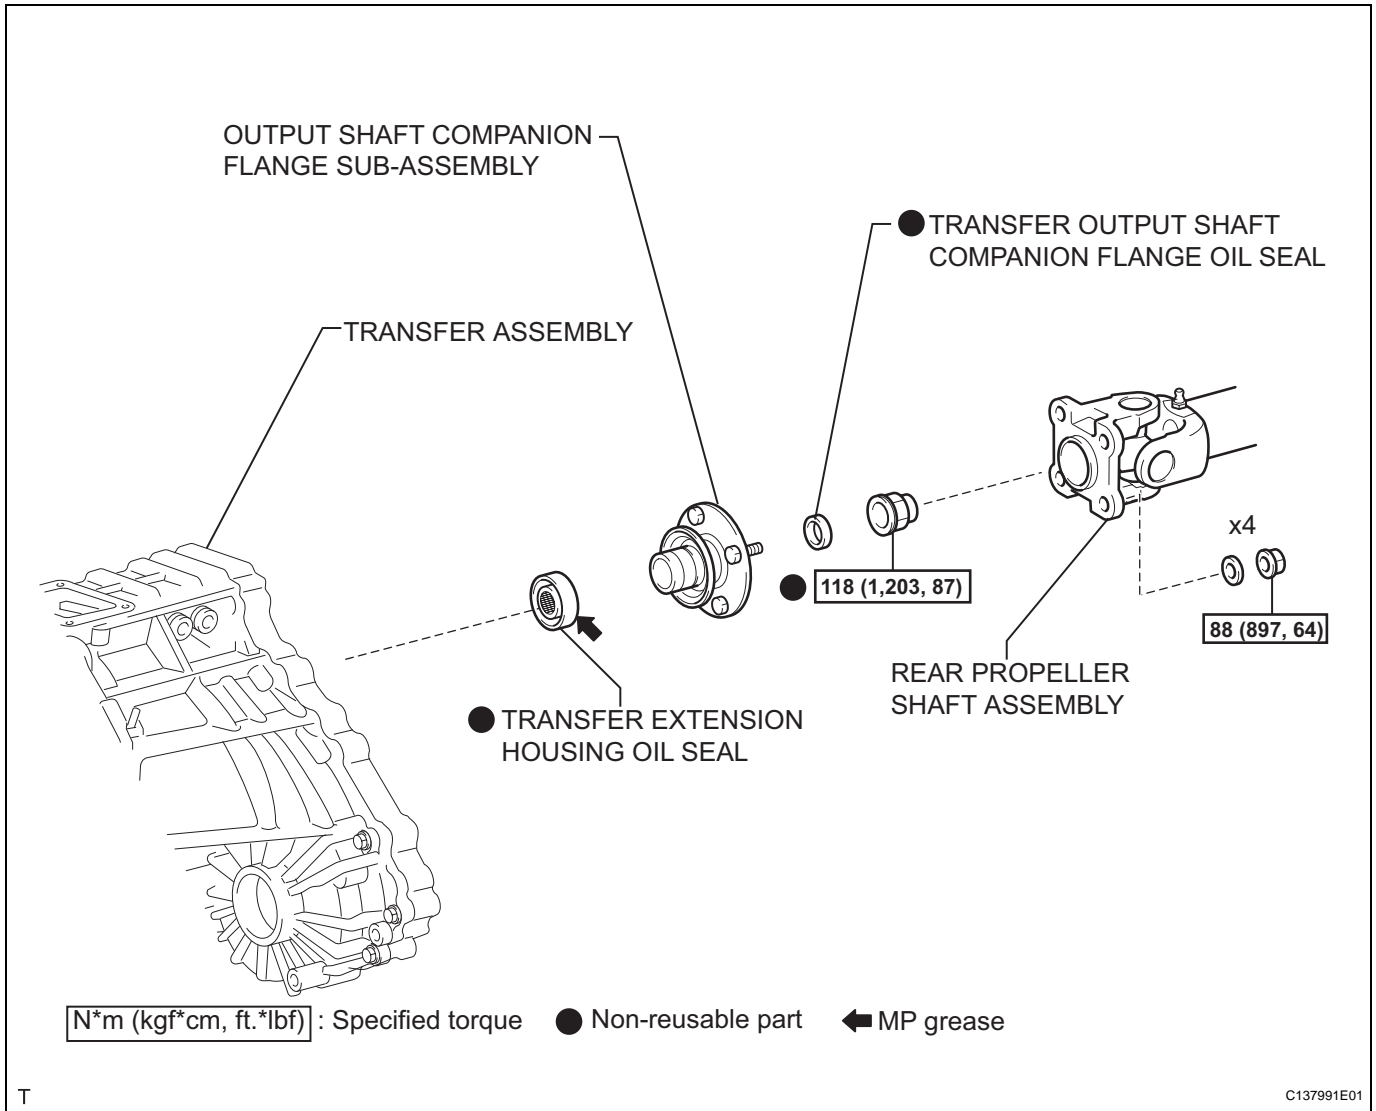

REMOVAL

1. DRAIN TRANSFER OIL
2. REMOVE LOWER TRANSFER CASE PROTECTOR
(See page [TF-7](#))
3. REMOVE REAR PROPELLER SHAFT ASSEMBLY
(See page [PR-9](#))
4. REMOVE OUTPUT SHAFT COMPANION FLANGE
SUB-ASSEMBLY (See page [TF-20](#))
5. REMOVE TRANSFER OUTPUT SHAFT COMPANION
FLANGE OIL SEAL (See page [TF-20](#))
6. REMOVE EXTENSION HOUSING OIL SEAL

(a) Using SST, tap out the oil seal.

SST 09308-00010

NOTICE:

**Be careful not to damage the oil seal and
extension housing contact surface.**

