


TRANSFER CASE OIL SEAL

COMPONENTS

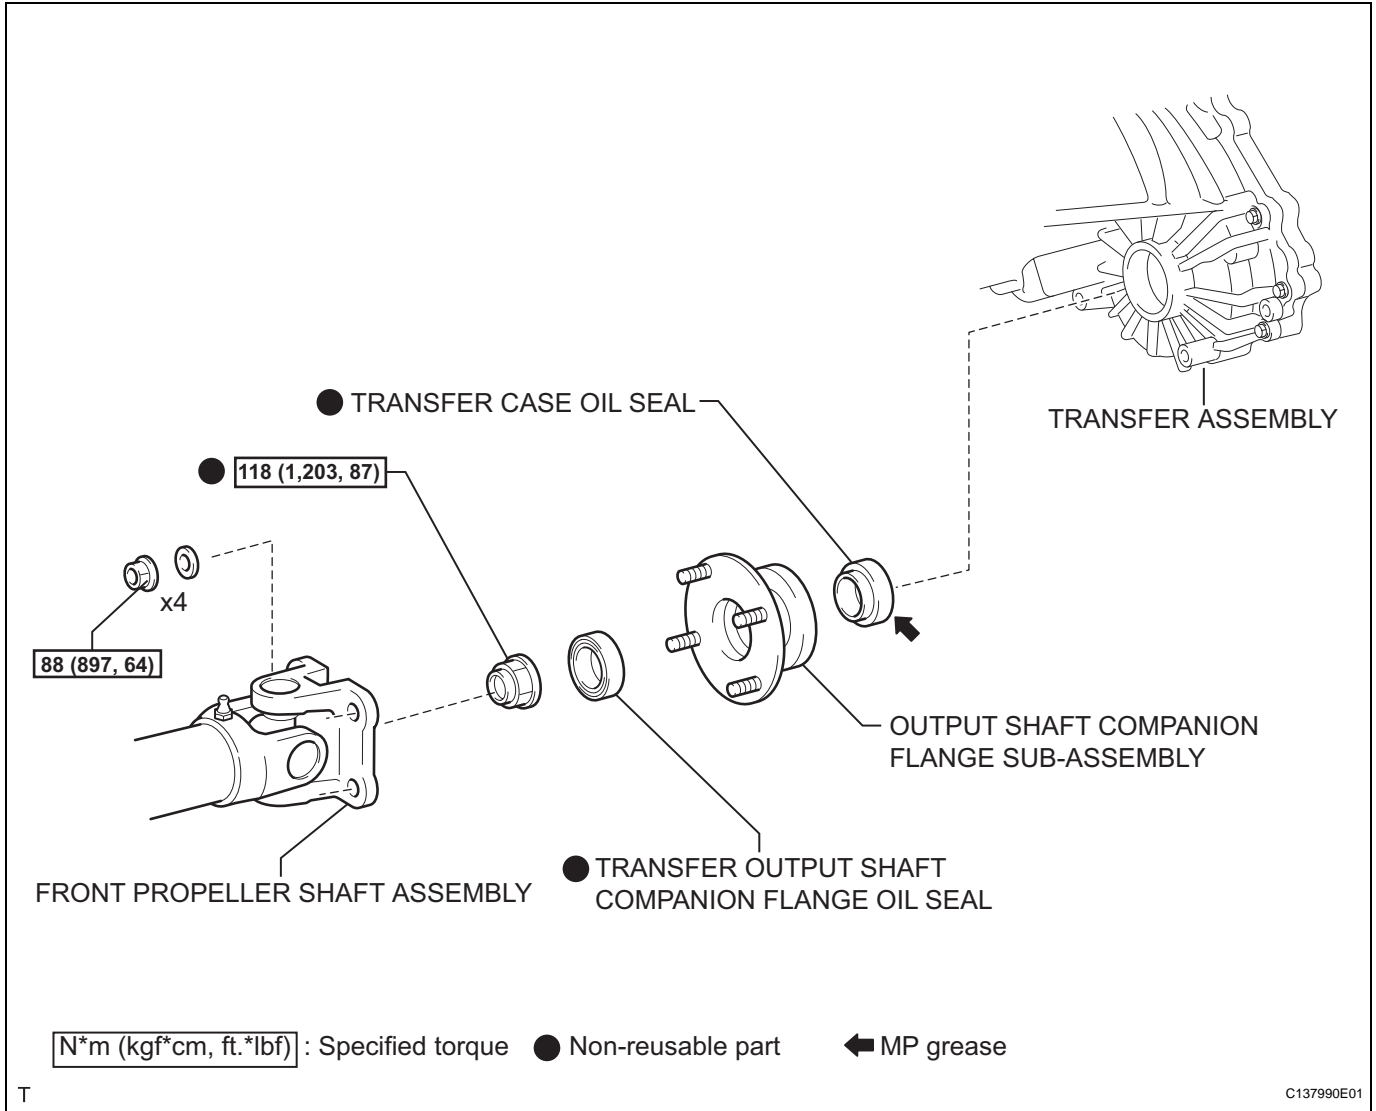

REMOVAL

1. DRAIN TRANSFER OIL
2. REMOVE LOWER TRANSFER CASE PROTECTOR
 - (a) Remove the brake hose clamp.
 - (b) Remove the 5 bolts and protector.
3. REMOVE FRONT PROPELLER SHAFT ASSEMBLY (See page [PR-2](#))
4. REMOVE OUTPUT SHAFT COMPANION FLANGE SUB-ASSEMBLY (See page [TF-19](#))
5. REMOVE TRANSFER OUTPUT SHAFT COMPANION FLANGE OIL SEAL (See page [TF-20](#))
6. REMOVE TRANSFER CASE OIL SEAL
 - (a) Using SST, tap out the oil seal.

SST 09308-00010

NOTICE:
Be careful not to damage the oil seal and case front contact surface.

