

## ON-VEHICLE INSPECTION

### 1. TRANSFER SYSTEM

#### NOTICE:

- To shift from H or HL to LL, stop the vehicle or reduce the vehicle's speed to less than 5 km/h (3 mph). Release the accelerator pedal, depress the clutch pedal and move the transfer shift lever.
- To shift from LL to HH, depress the clutch pedal and move the transfer shift lever.

### 2. CHECK CENTER DIFFERENTIAL LOCK INDICATOR LIGHT

- Start the engine.
- Move the transfer shift lever from the H position to the HL or LL position.
- Check that the center differential lock indicator light illuminates.
- Move the transfer shift lever from the HL or LL position to the H position.
- Check that the center differential lock indicator light turns off.

#### HINT:

- If the indicator light does not turn off when you move the transfer shift lever into H, drive straight ahead while accelerating or decelerating.
- If the indicator light does not turn on when you move the transfer shift lever into HL or LL, drive the vehicle straight ahead while accelerating or decelerating.

