

WASHER NOZZLE

ON-VEHICLE INSPECTION


1. INSPECT FRONT WASHER NOZZLE

- (a) Start the engine.
- (b) Check where the washer fluid hits the windshield.

Standard:

Washer fluid hits the windshield in the areas shown in the illustration.

for Front Side:

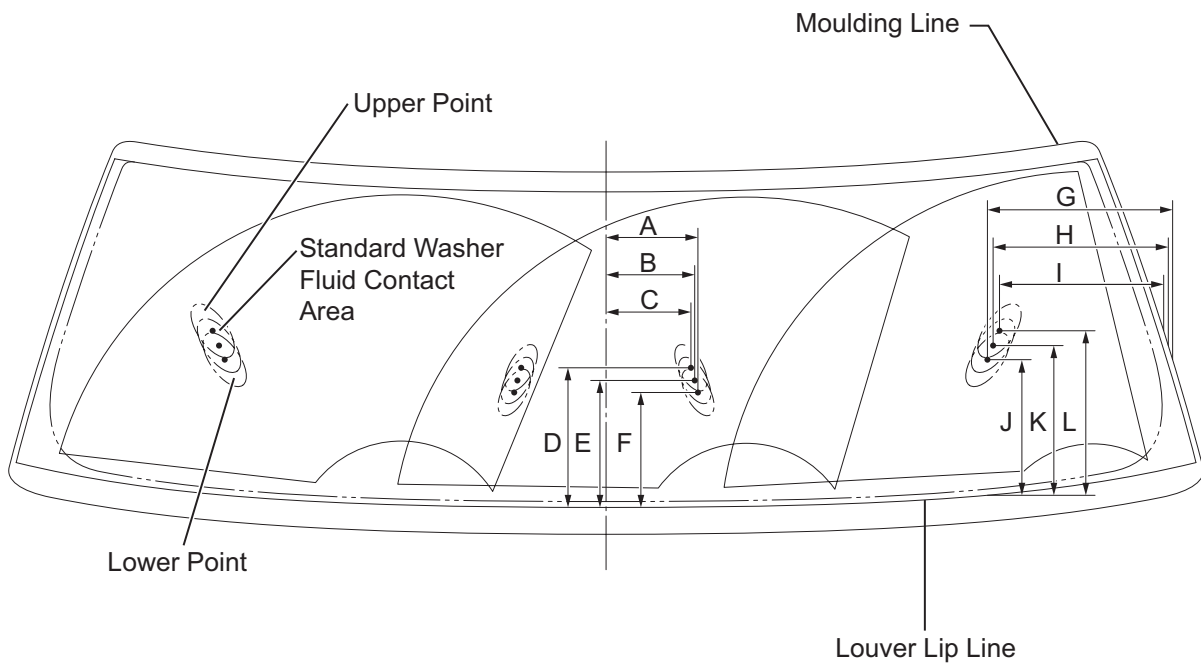

T

E127829E01

Specification

Area	Measurement
A	45.5 mm (1.79 in.)
B	39 mm (1.54 in.)
C	32.5 mm (1.28 in.)
D	206 mm (8.11 in.)
E	191.5 mm (7.54 in.)
F	177 mm (6.97 in.)
G	335 mm (13.19 in.)
H	328 mm (12.91 in.)

Area	Measurement
I	320 mm (12.60 in.)
J	158 mm (6.22 in.)
K	170.5 mm (6.71 in.)
L	183.5 mm (7.22 in.)

HINT:


If the result is not as specified, replace the washer nozzle.

2. INSPECT REAR WASHER NOZZLE (w/ Rear Wiper)

- (a) Start the engine.
- (b) Check where the washer fluid hits the windshield.

Standard:

Washer fluid hits the windshield in the areas shown in the illustration.

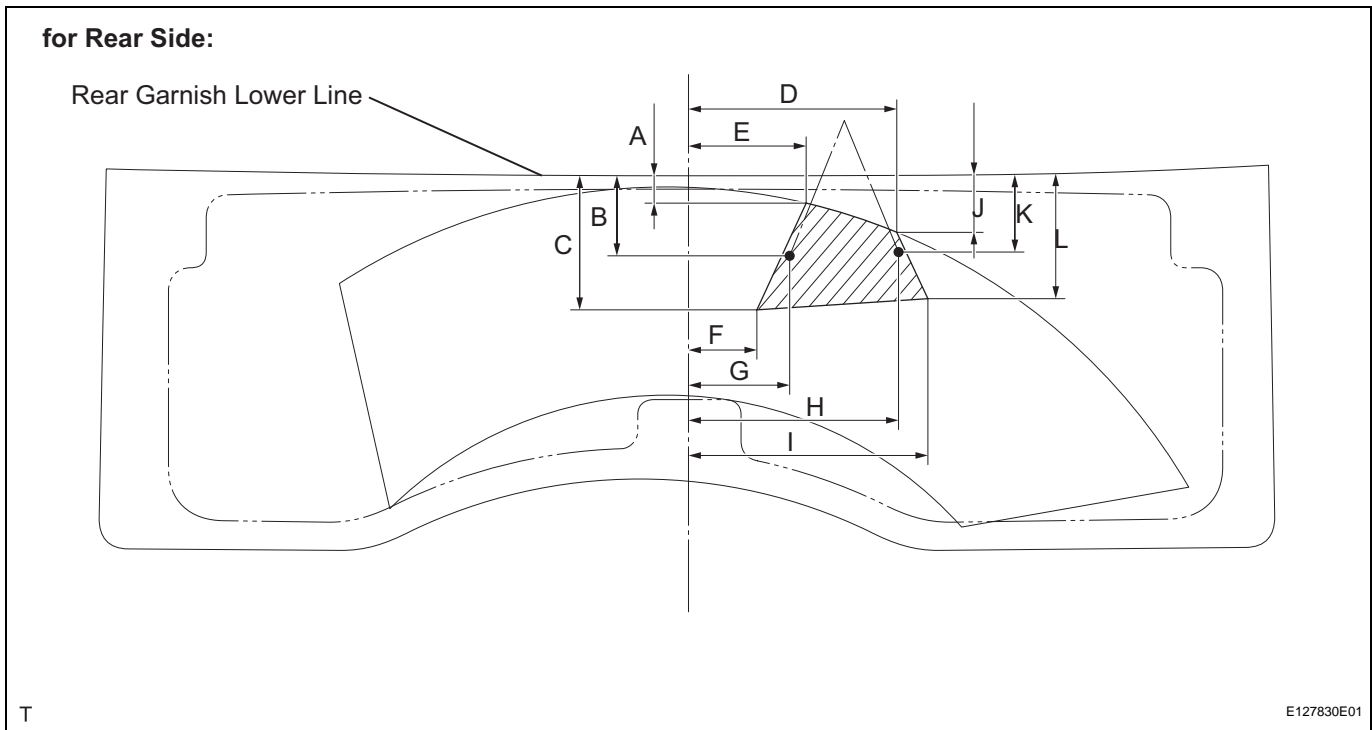


Specification

Area	Measurement
A	26.5 mm (1.04 in.)
B	77 mm (3.03 in.)
C	129.5 mm (5.10 in.)
D	200 mm (7.87 in.)
E	113.5 mm (4.47 in.)
F	66 mm (2.60 in.)
G	98 mm (3.86 in.)
H	202.5 mm (7.97 in.)
I	231.5 mm (9.11 in.)
J	54.5 mm (2.15 in.)
K	74.5 mm (2.93 in.)
L	120.5 mm (4.74 in.)

HINT:

If the result is not as specified, adjust the washer nozzle.

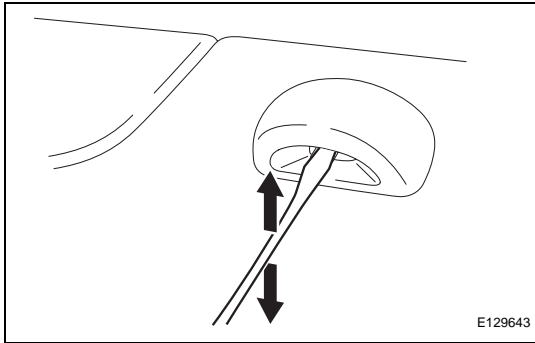

3. ADJUST REAR WASHER NOZZLE (w/ Rear Wiper)

- (a) Using a screwdriver, adjust the direction of the rear washer nozzle.

HINT:

Use a thin-bladed screwdriver with an approximately 1 mm thick tip.