

---


# CHARGING SYSTEM

## PRECAUTION

### 1. PRECAUTION

- (a) Check that the battery cables are connected to the correct terminals.
- (b) Disconnect the battery cables if the battery is charged quickly.
- (c) Do not perform tests using a high voltage insulation resistance tester.
- (d) Never disconnect the cable from the battery while the engine is running.
- (e) Check that the charging cables are tightly connected to terminals B of the generator and the fuse box.
- (f) Do not check whether the generator generates current or not while terminal F is connected to the other terminals.

# PARTS LOCATION

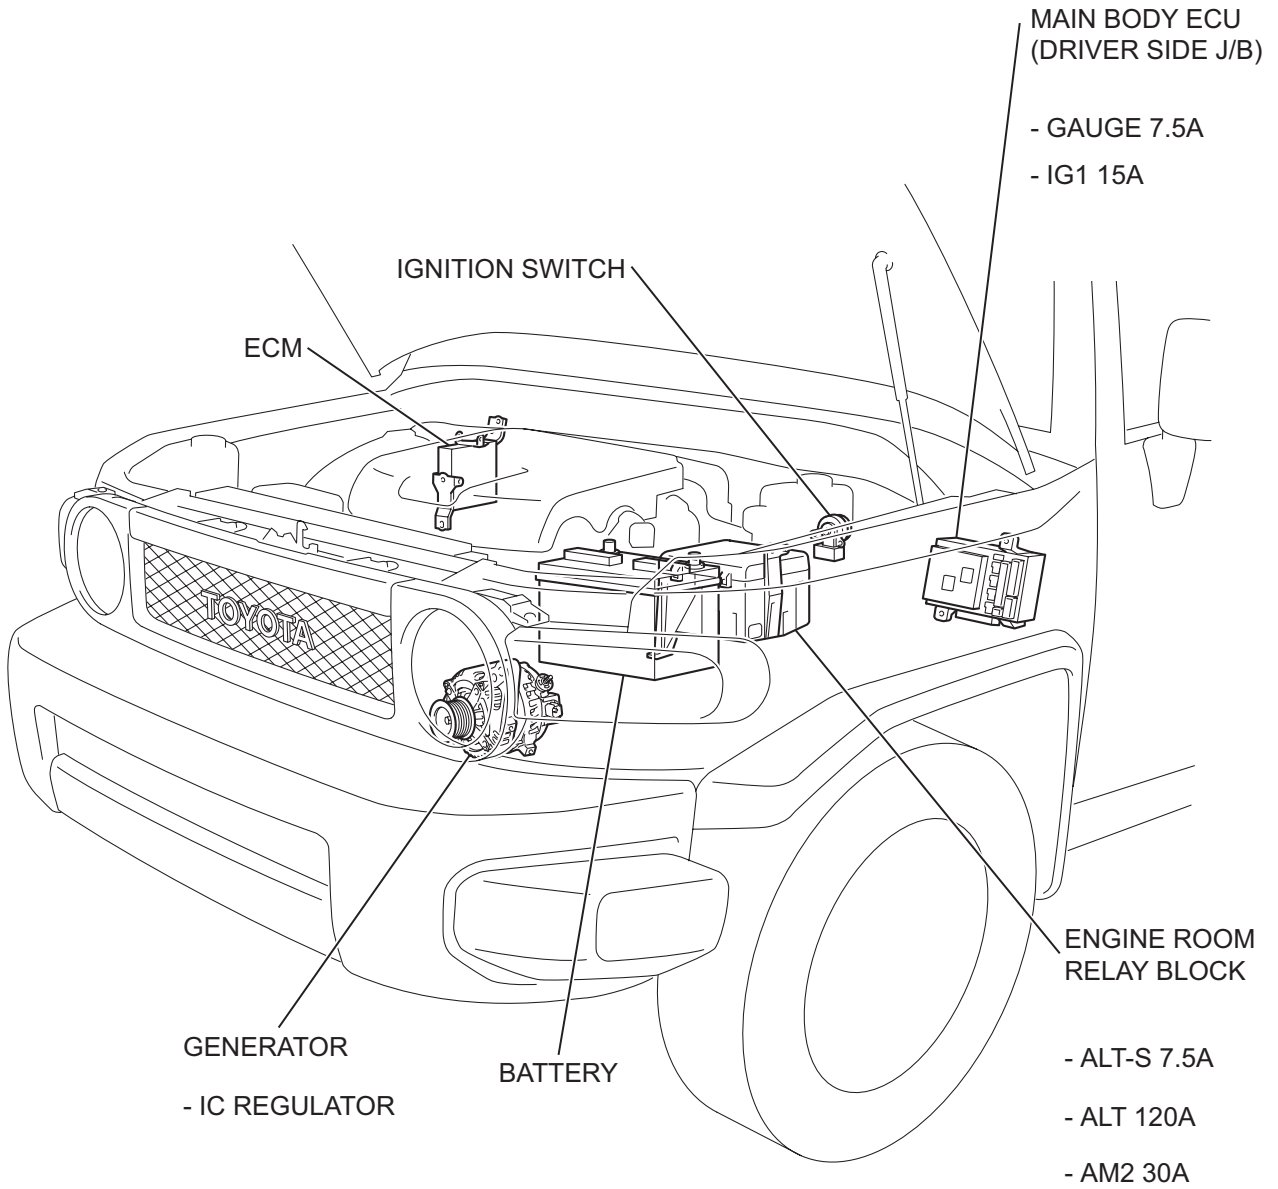

CH