



97- 06 TJ REAR ADJ TRACK BAR

Thank you for choosing Rough Country for your Jeep off road needs.

Please read all the instructions before beginning the installation.

PRODUCT USE INFORMATION

We will be happy to answer any questions regarding our products by calling us @ 800-222-7023. Rough Country will not be responsible for any product that is altered. **This kit is for use with vehicles lifted 0 -6" of lift.**

KIT CONTENTS

1-ADJ TRACK ROD BODY & END

1-Poly Bag containing:

- 4-Bushings
- 2-Sleeves
- 1-3/4" Jam nut

TOOLS NEEDED

- T55 Torx Bit
- 18mm Wrench
- 15mm Socket
- 1 1/8" Wrench



INSTALLATION INSTRUCTIONS

1. Remove the stock track rod from the axle using T55 Torx bit and using a 15mm & 18mm socket / wrench on the frame mount . Retain the stock hardware for reuse.
2. Install the bushings & sleeves in the Rough Country adjustable track rod.
3. Install the body of the adjustable track rod in the frame mount with the factory hardware. Do not tighten at this time. **See Photo 1.**



PHOTO 1

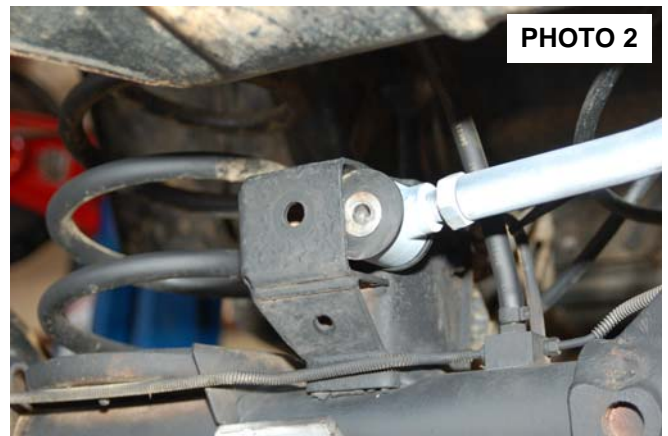


PHOTO 2

4. Make sure the vehicle is centered over the axle and adjust the threaded end to install in the axle mount. Snug the jam nut with a 1 1/8" wrench. **See Photo 2.**
5. Install using the factory hardware and tighten using a T55 bit on the axle and a 15mm & 18mm on the frame.

POST INSTALLATION

1. Check all fasteners for proper torque. Check to ensure there is adequate clearance between all rotating, mobile, fixed and heated members. Check steering for interference and proper working order.
2. Re torque all fasteners after 500 miles. Visually inspect components and re torque fasteners during routine vehicle service.

Thank you for choosing Rough Country for your Jeep off road needs.