



JEEP WHEEL SPACER KIT

Thank you for choosing Rough Country for all your suspension needs.

Professional knowledge of disassemble/reassembly procedures as well as post installation checks must be known. Attempts to install these wheel spacers without this knowledge and expertise may jeopardize the integrity and/or operating safety of the vehicle.

Please read instructions before beginning installation. Also please review tools needed list and make sure you have needed tools.

Kit Contents:

2-1 1/2" Wheel Spacers

Tools Needed:

19mm Socket
Torque Wrench
Floor Jack
Jack Stands
Flat Head Screwdriver



Installation Instructions

1. Chock the tires and jack up the vehicle.
2. Remove the lug nuts and remove the tire and wheel.
3. Remove the rotor retainer star washers if so equipped using a flat head screwdriver. Removing these will allow the wheel spacer to sit flat on the rotor surface. These must be removed.
4. Install the wheel spacers as shown with the supplied lug nuts. **See Photo 1.** Tighten to manufacturer specifications using a 19mm wrench.
5. Reinstall the tires/wheels. **See Photo 2.** Tighten the lug nuts holding the wheels and tires to factory specifications.

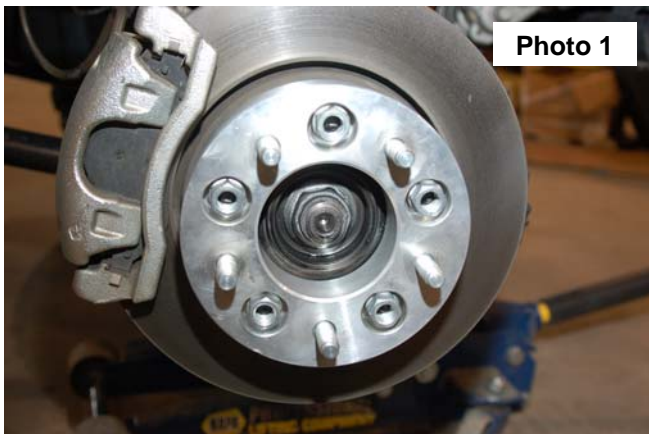


Photo 1



Photo 2

Post Installation

1. Re torque all fasteners after 500 miles. Visually inspect components and re torque fasteners during routine vehicle service.