



## Installation Instructions For Sway Bar Disconnects

### PRODUCT USE INFORMATION

**IMPORTANT:** Sway bars should only be disconnected during off road use. Any time your vehicle is used on the road disconnects should be connected.

If question exist we will be happy to answer any questions concerning the design, function, and correct use of our products.

### INSTALLATION INSTRUCTIONS


1. These instructions cover installation on YJ, TJ, CJ, and XJ Cherokees. There are small differences that are noted.
2. Make sure the vehicle is on a level surface. Make sure the vehicle is in gear to prevent movement.
3. On the front of the vehicle, remove the stock sway bar links by removing the stock nuts and bolts.
4. Assemble the new quick disconnect link body and link ends with the supplied double wire hitch pin.
5. Locate the supplied bushings and sleeves and install in the new sway bar end links.
6. If the vehicle has a stud type mounting on the upper sway bar mount, brackets are included to convert these mounts to a eyelet mounts. See optional front sway bar hoop bracket instructions below.
7. On TJ and XJ, install links on the upper and lower sway bar mounts using supplied hardware.
8. On TJ Wrangler applications the supplied thick washer is needed to space the bottom of the disconnect over to insure the sway bar disconnect is straight. The sway bar hoop bracket also has a slotted hole on the top to allow the bracket to move side to side if needed to straighten the sway bar link.
9. On YJ and CJ install the links on the upper mount using supplied hardware. On the lower mount use stock hardware.
10. Do not over tighten the poly bushings. If the bushings are over tightened, the link will be very difficult to disconnect and move out of the way during off road use. The general tightening procedure is to tighten until the bushing is snug and very slightly swells.



## OPTIONAL FRONT SWAY BAR HOOP BRACKET FOR TJ AND XJ VEHICLES

On XJ and TJ models, a hoop bracket is supplied to convert the stud type mounting to an eye-ring mount.

1. After the stock link has been removed. Install the supplied hoop bracket on the upper sway bar mount and secure with the supplied 3/8" bolts, washers and lock nuts.
2. Proceed with install as instructed above.

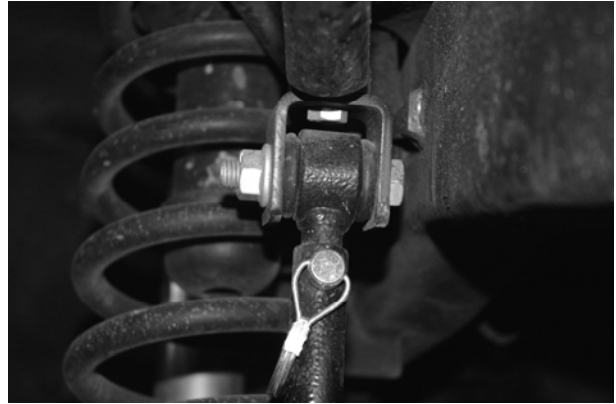

PART # 1187

PART # 1186 / 1188



1187 Parts List

1186 / 1188 Parts List

- 4- Disconnect Ends
- 2- Disconnect Centers
- 2- Sway Bar Brackets
- 1- 1187Bag (Including)
- 8- Sway Bar Bushings
- 2- 12mm x65mm Bolts
- 4- 12mm Lock Nuts
- 2- 12mmx80mm Bolts
- 8- 7/16" Flat Washers
- 4- Sleeves
- 2 3/8" x 1 1/4" Bolt
- 2 3/8" Lock Nuts
- 2- 3/8" Flat Washers
- 4- Double Wire Hitch Pins
- 2- Thick Washers

- 4- Disconnect Ends
- 2- Disconnect Centers
- 1- 1186Bag (Including)
- 8- Sway Bar Bushings
- 2- 12mm x65mm Bolts
- 4- 12mm Lock Nuts
- 4- Sleeves
- 4- Double Wire Hitch Pins