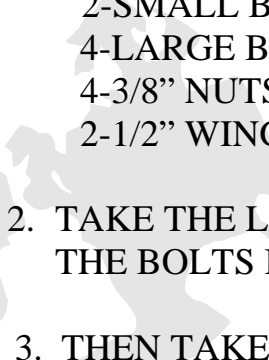


.....

Warrior Products, Inc.

WAR 841 INSTALLATION INSTRUCTIONS

NOTE: Please read all instructions before starting installation.

- 
1. PARTS BREAK DOWN
 - 2-SMALL BRACKETS
 - 4-LARGE BRACKETS
 - 4-3/8" NUTS AND WASHERS
 - 2-1/2" WING NUTS
 2. TAKE THE LARGE BRACKET WITH BOLTS WELDED TO IT AND PLACE THE BOLTS BETWEEN THE BASKET TOP AND BOTTOM TUBES.
 3. THEN TAKE THE SMALL BRACKET WITH TWO HOLES AND SLIP OVER THE BOLTS FROM THE INSIDE OF THE BASKET. PLACE THE 3/8" WASHERS OVER BOLTS AND THEN THE LOCK NUTS AND TIGHTEN INTO PLACE AS DESIRED. SPACE THE OTHER LARGE BRACKET WITH BOLTS APPROXIMATLY 18" APART AND REPEAT STEP 1 AND 2.
 4. NOW TAKE THE OTHER LARGE BRACKET WITH ONE HOLE AND SLIP IT OVER THE BOLT AND START THE 1/2" WING NUT. THEN REPEAT ON OTHER MOUNT. SLIP THE SHOVEL AND AXE INTO TOP AND BOTTOM CLAMPS AND TIGHTEN WING NUTS.
 5. CHECK WING NUTS AFTER EVERY OUTING OFF ROAD.

.....

"Your Knight in Shining Armor!"

October 4, 2006
Page 2