

## **Installation Instructions Toyota Trail Teams Rear Valance (52169-35060)**


These instructions are provided merely as a general guide. Each vehicle is different and a professional should be consulted if you experience installation issues.

### **Tools Needed:**

- 10mm socket or wrench
- Regular (flat) screwdriver

### **Step 1: Removal of original part**

1. Use the **10mm** to remove the **FOUR** screws on the bottom of the valance. Set screws aside as they will be used to reinstall.

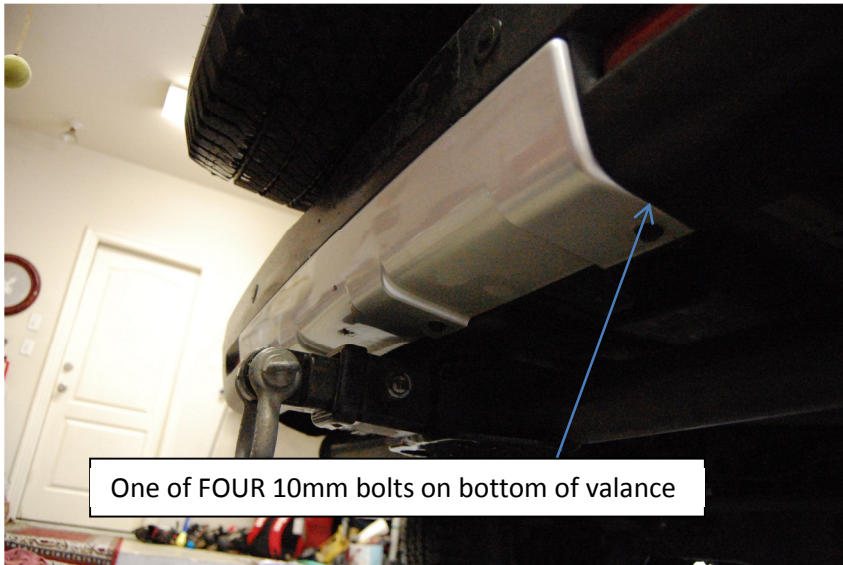

2. Using a flat blade screw driver, gently pry from the top of the valance while also gently pulling the bottom of the valance so that it gets pulled out evenly. Start on either side and work your way the other direction.



3. The valance should pop off with little effort.



## **Step 2: Installation**

1. With the original piece removed, you can now place the new valance. Use the guides on the valance to locate the part onto the FJ. Once you have it in place, gently push or bump each of the four snaps into the original holes.





2. Replace the screws that you set aside earlier.



3. Stand back and admire your work!

