




INSTALLATION INSTRUCTIONS
CAT BACK STAINLESS SINGLE REAR EXHAUST
2007 TOYOTA FJ CRUISER 4.0L 4WD 4DR
PART # 618807

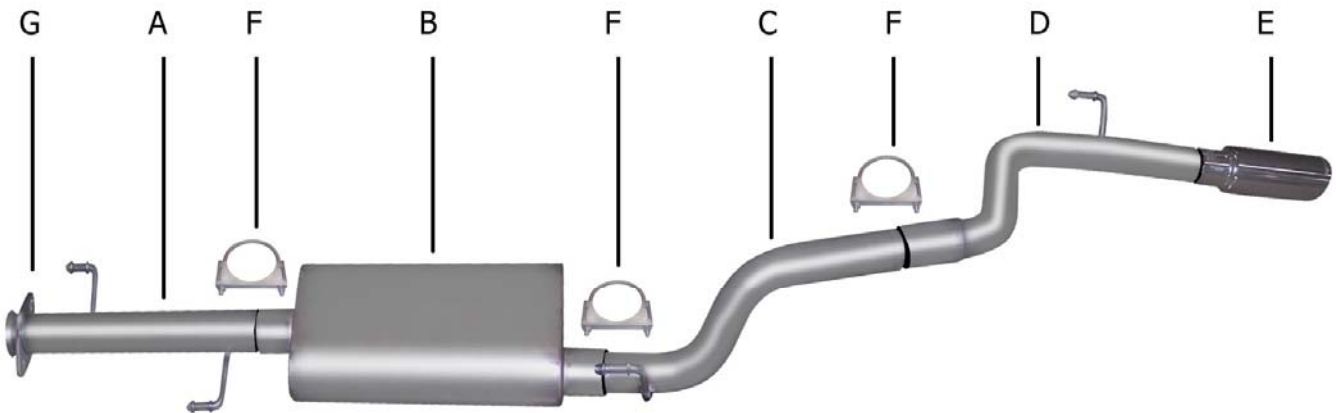

ITEM	PART #	QUANTITY	DESCRIPTION
A	1062-700852S	1	2½" Stainless Headpipe w/GP-532 flange and welded hangers
B	11220S	1	Stainless Superflow muffler
C	1063-700853S	1	2½" Stainless Over axle tailpipe w/welded hanger
D	1064-700854S	1	2½" Stainless Exit pipe w/welded hanger
E	500374	1	3½" Stainless tip
F	5757	3	2½" Clamp
G	BO-1036	1	Bolt Kit for headpipe

Thank you for purchasing our Gibson exhaust system for your vehicle. If you need further assistance, please do not hesitate to call our technical dept at (800) 528-3044 Monday through Friday, 8:00 am to 5:00 pm. 0606

CAREFULLY READ INSTRUCTIONS BEFORE STARTING INSTALLATION.

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16" 15mm wrenches & sockets, WD-40, hacksaw, jack stands.

.....
Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.
.....



1. To remove the stock exhaust remove it from the 2-bolt flange located in front of the stock muffler. Disengage the welded hangers using WD-40 from the OEM rubber grommets. Do not damage or remove the rubber grommets as you will re-use them to mount your new system. Now, cut off tailpipe and remove exhaust.



4. Install the overaxle tailpipe #C into the muffler 1 1/2-2" secure with clamp #F. **DO NOT TIGHTEN.** Insert welded hanger into rubber grommet.



2. Install head pipe #A onto your existing stock front pipe and attach with hardware kit #G. **DO NOT TIGHTEN.** Insert welded hangers into rubber grommets.



5. Next, install the exit pipe #D. onto overaxle pipe. Use clamp #F to secure to the tailpipes. **DO NOT TIGHTEN.** Insert welded hanger into rubber grommet.



3. Install muffler #B onto head pipe 1 1/2"-2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamp #F to secure the muffler to the headpipe. **DO NOT TIGHTEN.**



6. Install stainless steel tip #E. Clamp down. When you have everything in place, firmly tighten all bolts and clamps down securely. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration.