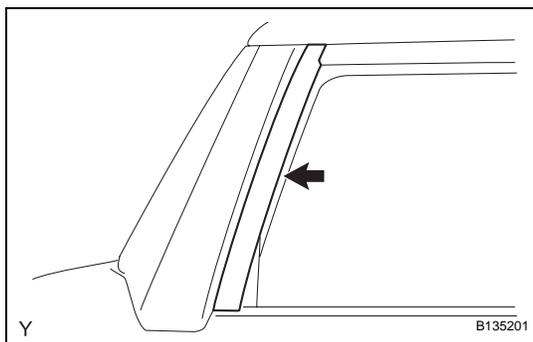


REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT DOOR ARMREST BASE UPPER PANEL**
HINT:
Use the same procedure as for the RH side (See page [ED-9](#)).
3. **REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY**
HINT:
Use the same procedure as for the RH side (See page [ED-9](#)).
4. **REMOVE FRONT DOOR NO. 2 SERVICE HOLE COVER**
HINT:
Use the same procedure as for the RH side (See page [ED-10](#)).
5. **REMOVE OUTER REAR VIEW MIRROR ASSEMBLY (See page [ET-39](#))**
6. **REMOVE FRONT DOOR GLASS OUTER WEATHERSTRIP ASSEMBLY (See page [ET-39](#))**
7. **REMOVE FRONT DOOR WEATHERSTRIP**
HINT:
Use the same procedure as for the RH side (See page [ED-11](#)).
8. **REMOVE FRONT DOOR GLASS RUN**
HINT:
Use the same procedure as for the RH side (See page [ED-12](#)).
9. **REMOVE FRONT DOOR LOWER FRAME SUB-ASSEMBLY**
HINT:
Use the same procedure as for the RH side (See page [ED-12](#)).
10. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH**
HINT:
Use the same procedure as for the RH side (See page [ED-12](#)).
11. **REMOVE FRONT DOOR WINDOW LOWER FRAME**
HINT:
Use the same procedure as for the RH side (See page [ED-12](#)).

**12. REMOVE NO. 1 BLACK OUT TAPE**

- (a) Using an infrared light, heat the No. 1 black out tape.

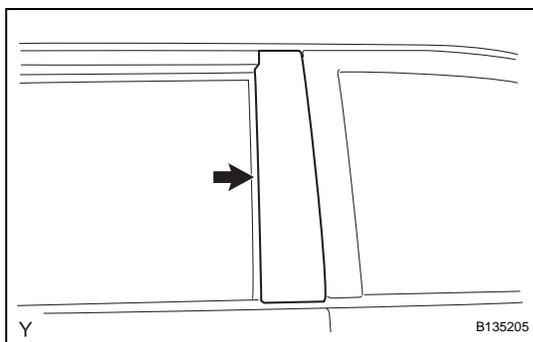
CAUTION:

Do not burn yourself with the heated front door panel or infrared light.

HINT:

Heat at 40 to 60°C (104 to 140°F) for 3 to 5 minutes.

- (b) Lift the end portion with your nail and peel it parallel to the attachment surface.

**13. REMOVE NO. 3 BLACK OUT TAPE**

- (a) Using an infrared light, heat the No. 3 black out tape.

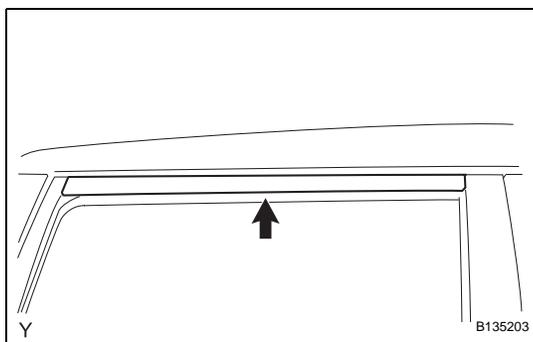
CAUTION:

Do not burn yourself with the heated front door panel or infrared light.

HINT:

Heat at 40 to 60°C (104 to 140°F) for 3 to 5 minutes.

- (b) Lift the end portion with your nail and peel it parallel to the attachment surface.

**14. REMOVE NO. 2 BLACK OUT TAPE**

- (a) Using an infrared light, heat the No. 2 black out tape.

CAUTION:

Do not burn yourself with the heated front door panel or infrared light.

HINT:

Heat at 40 to 60°C (104 to 140°F) for 3 to 5 minutes.

- (b) Lift the end portion with your nail and peel it parallel to the attachment surface.