


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.**

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA FJ CRUISER FRONT FLOOR LINERS (WITH MANUAL TRANSMISSION)

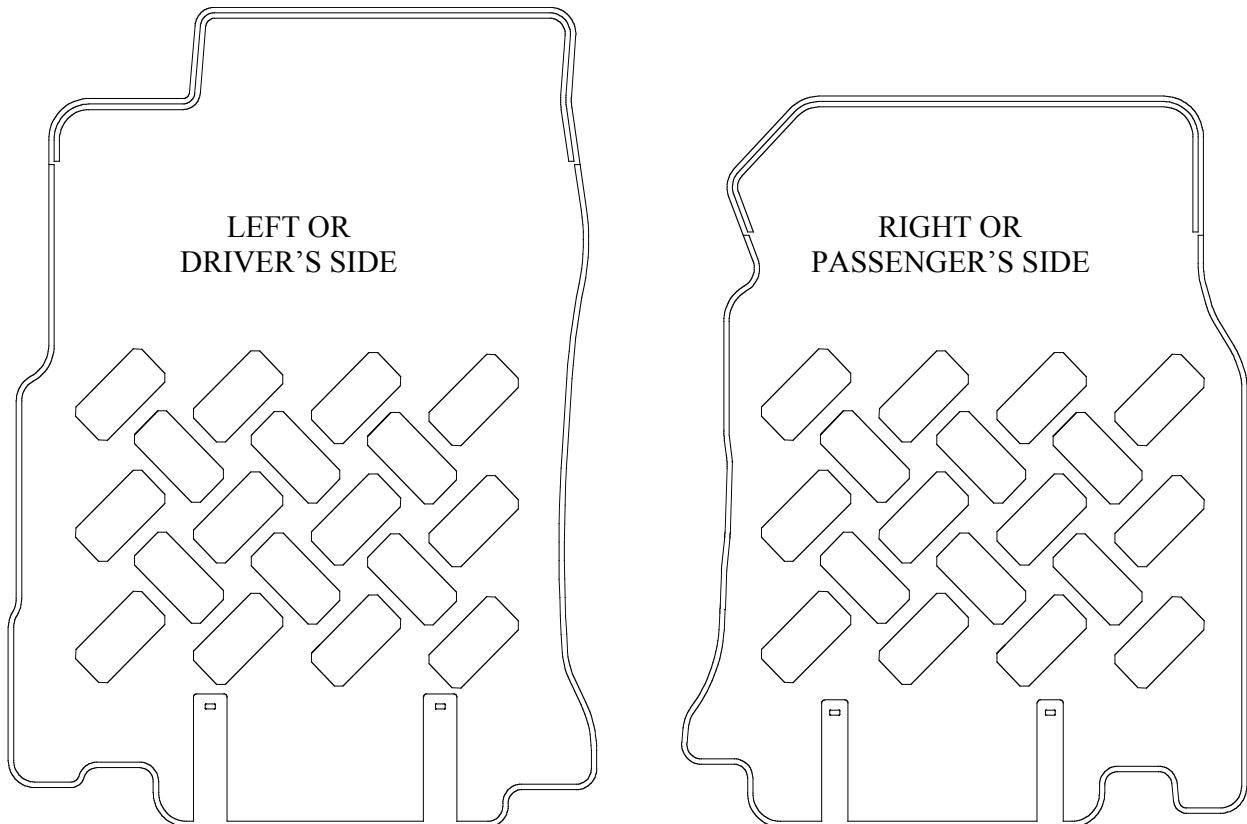

NOTE: YOUR TOYOTA FJ CRUISER COMES EQUIPPED WITHOUT FACTORY INSTALLED CARPETING. TO HELP SECURE YOUR HUSKY LINERS IN PLACE, THE LINERS ARE DESIGNED TO UTILIZE THE FACTORY MAT HOOKS. YOUR FJ CRUISER SHOULD HAVE TWO FACTORY MAT HOOKS ON THE DRIVER'S AND PASSENGER'S SIDE FLOOR PANS (SEE PHOTOS ON BACK). IF YOUR FJ CRUISER DOES NOT HAVE THESE HOOKS INSTALLED, CHECK IN THE GLOVE BOX AS THEY ARE OFTEN PLACED IN THE GLOVE BOX DURING SHIPPING. FOLLOW THE INSTALLATION INSTRUCTIONS PROVIDED WITH THE MAT HOOKS TO INSTALL THEM. IF YOU CANNOT FIND THE HOOKS IN YOUR VEHICLE, CONSULT YOUR DEALERSHIP. DO NOT INSTALL THE LINERS WITHOUT UTILIZING THE FACTORY MAT HOOKS. FURTHER NOTE THAT THESE LINERS ARE DESIGNED FOR MANUAL TRANSMISSION EQUIPPED FJ CRUISERS. IF YOU HAVE AN AUTOMATIC TRANSMISSION EQUIPPED FJ CRUISER, YOU NEED HUSKY LINER PART #3596.



FJ CRUISER DRIVER'S SIDE FLOOR PAN WITH MAT HOOKS INSTALLED



FJ CRUISER PASSENGER'S SIDE FLOOR PAN WITH MAT HOOKS INSTALLED



HUSKY LINER PART #3596 SHOWN INSTALLED IN THE FJ CRUISER. NOTE THAT LINERS MUST BE ATTACHED OVER FACTORY MAT HOOKS TO HELP SECURE LINERS IN POSITION.

