

HEATER BLOWER MOTOR RELAY

ON-VEHICLE INSPECTION


1. INSPECT HEATER BLOWER MOTOR RELAY ASSEMBLY

- (a) Check the resistance.
 - (1) Using an ohmmeter, measure the resistance between the terminals.

Standard resistance

Tester Connection	Specified Condition
3 - 4	Below 1 Ω
3 - 4	10 k Ω or higher (Apply battery voltage to terminals 1 and 2)
3 - 5	10 k Ω or higher
3 - 5	Below 1 Ω (Apply battery voltage to terminals 1 and 2)

If the result is not as specified, replace the relay.

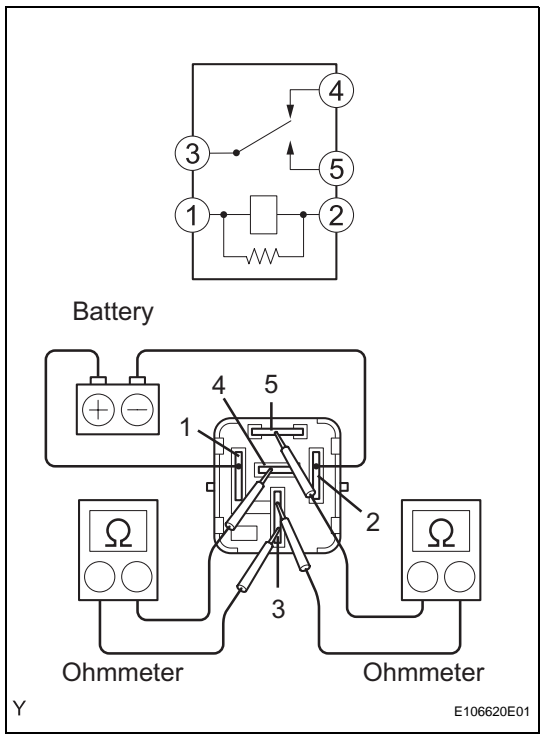

AC

E106620E01