



## REMOVAL

1. REMOVE CLUTCH MASTER CYLINDER ASSEMBLY  
(See page [CL-10](#))

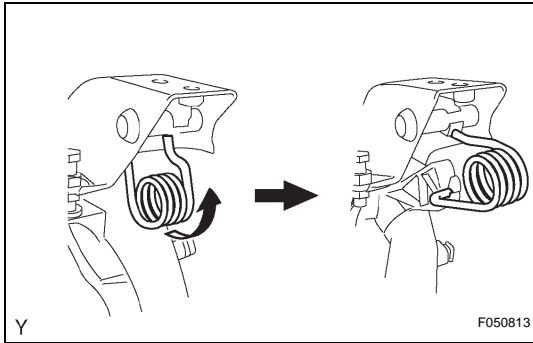


2. REMOVE TURN OVER SPRING SEAT  
COMPRESSION SPRING  
(a) Remove the compression spring.

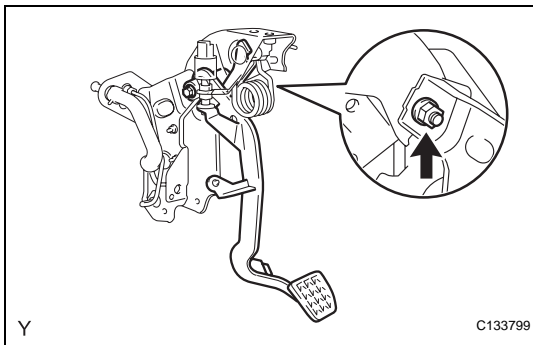


3. REMOVE CLUTCH PEDAL SUB-ASSEMBLY

- (a) Remove the bolt and nut.
- (b) Remove the clutch pedal from the clutch pedal support.

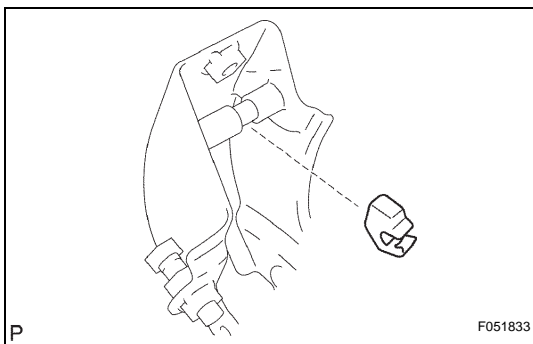


4. REMOVE CLUTCH PEDAL SPRING HOLDER

- (a) Remove the clutch pedal spring holder from the clutch pedal support.

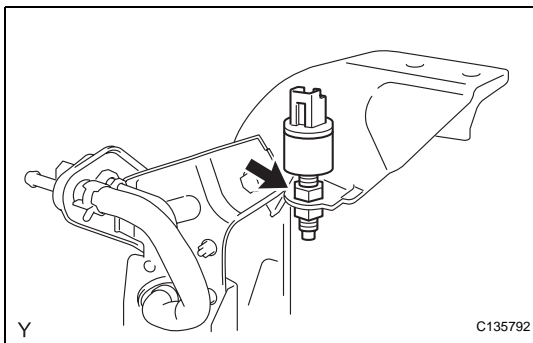


5. REMOVE CLUTCH SWITCH ASSEMBLY (w/ Cruise Control)

- (a) Loosen the lock nut and remove the clutch switch.

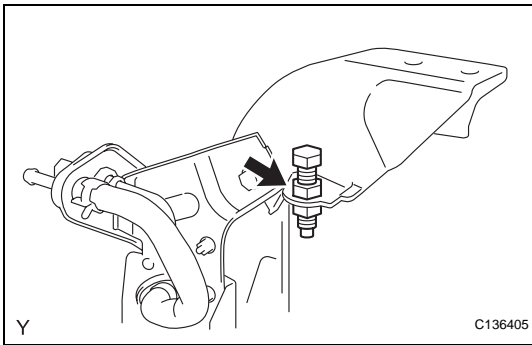


- 6. REMOVE CLUTCH PEDAL STOPPER BOLT (w/o Cruise Control)**  
 (a) Loosen the lock nut and remove the clutch pedal stopper bolt.


**7. REMOVE CLUTCH PEDAL PAD**

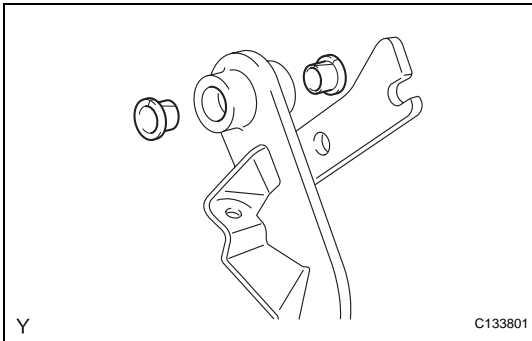


- 8. REMOVE CLUTCH PEDAL BUSH**  
 (a) Remove the 2 bushes from the clutch pedal.

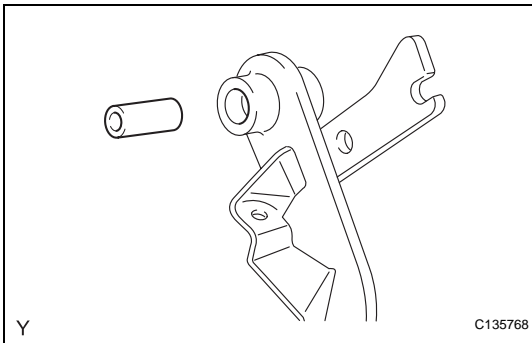


- 9. REMOVE CLUTCH PEDAL SHAFT COLLAR**  
 (a) Remove the clutch pedal shaft collar.

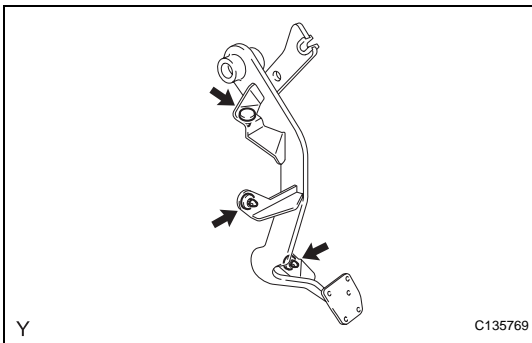

- 10. REMOVE CLUTCH PEDAL NO.1 CUSHION**  
 (a) Using needle-nose pliers, remove the 3 No. 1 cushions from the clutch pedal.

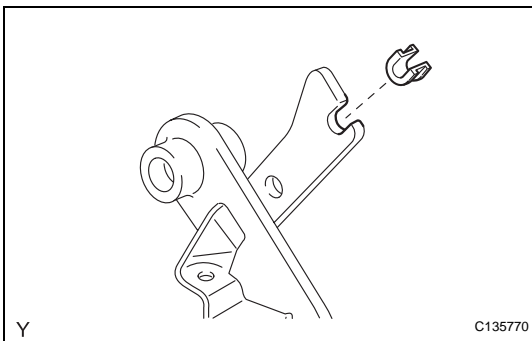

- 11. REMOVE CLUTCH PEDAL TURNOVER BUSH**  
 (a) Remove the clutch pedal turnover bush from the clutch pedal.

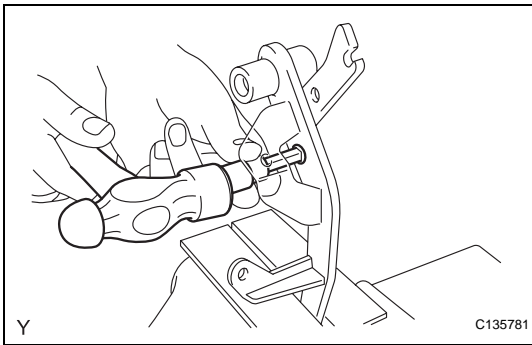

## 12. REMOVE CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH

- (a) Using an 8 mm hexagon wrench and a hammer, remove the clevis bush.


## INSTALLATION

### 1. INSTALL CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH

- (a) Apply MP grease to the inside of a new clevis bush.
- (b) Install the clevis bush onto the clutch pedal.


HINT:

Install the clevis bush from the left side of the vehicle.

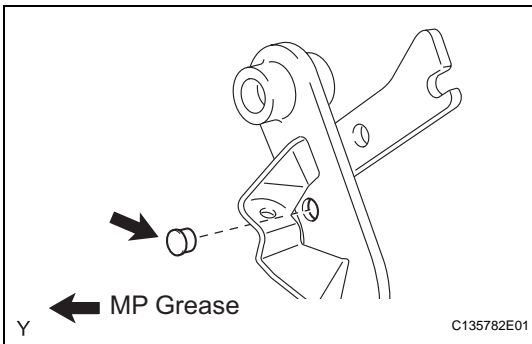


### 2. INSTALL CLUTCH PEDAL TURNOVER BUSH

- (a) Apply MP grease to the clutch pedal turnover bush.
- (b) Install the clutch pedal turnover bush onto the clutch pedal.

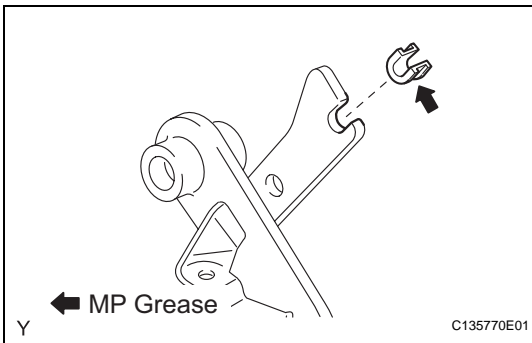


### 3. INSTALL CLUTCH PEDAL NO.1 CUSHION


- (a) Install the 3 No. 1 cushions onto the clutch pedal.

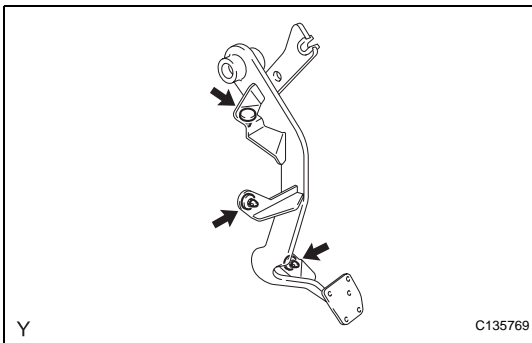


### 4. INSTALL CLUTCH PEDAL SHAFT COLLAR

- (a) Apply MP grease to the clutch pedal shaft collar.
- (b) Install the clutch pedal shaft collar onto the clutch pedal.

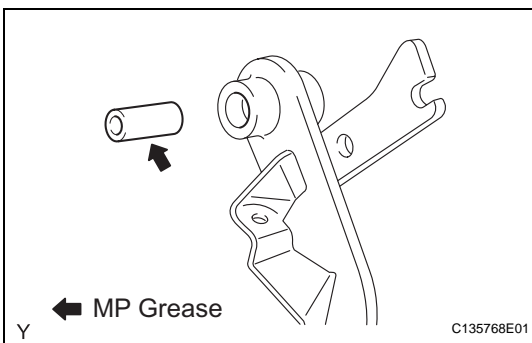

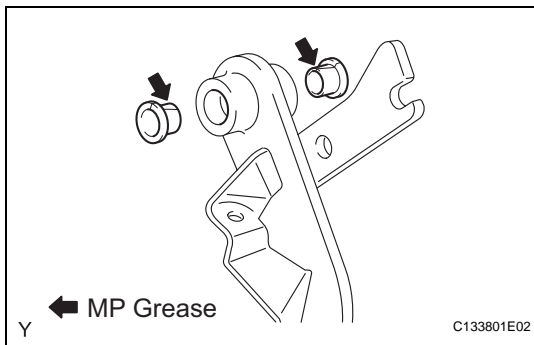**5. INSTALL CLUTCH PEDAL BUSH**


- (a) Apply MP grease to 2 new bushes.
- (b) Install the 2 bushes onto the clutch pedal.

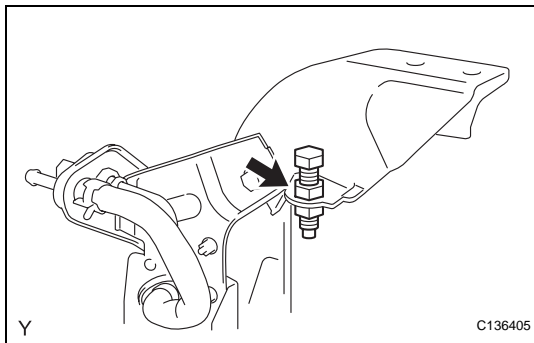**6. INSTALL CLUTCH PEDAL PAD****7. INSTALL CLUTCH PEDAL STOPPER BOLT (w/o Cruise Control)**

- (a) Install the clutch pedal stopper bolt and provisionally tighten the lock nut.

HINT:


Tighten the lock nut to the specified torque when adjusting the clutch pedal.

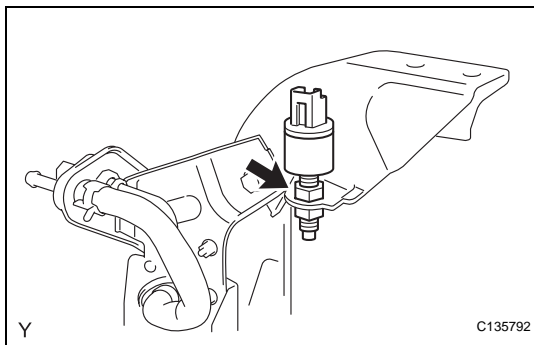**8. INSTALL CLUTCH SWITCH ASSEMBLY (w/ Cruise Control)**


- (a) Install the clutch switch and provisionally tighten the lock nut.

HINT:

Tighten the lock nut to the specified torque when adjusting the clutch pedal.

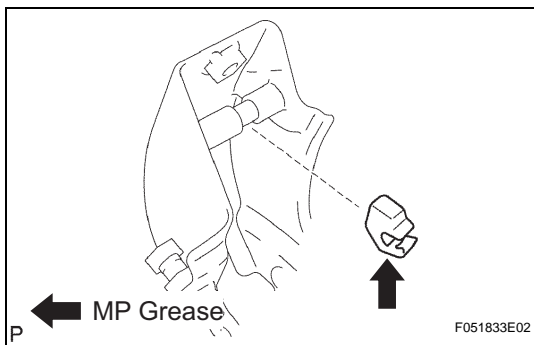**9. INSTALL CLUTCH PEDAL SPRING HOLDER**

- (a) Apply MP grease to the contact surface of the clutch pedal spring holder.
- (b) Install the clutch pedal spring holder.

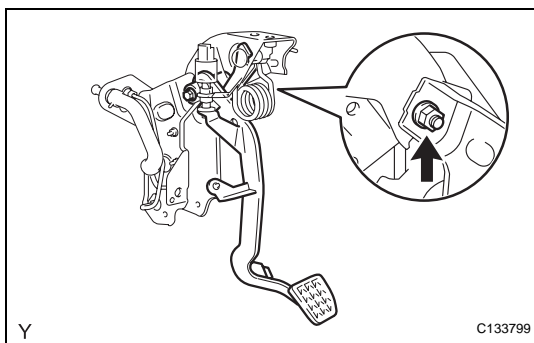
**10. INSTALL CLUTCH PEDAL SUB-ASSEMBLY**

- (a) Install the clutch pedal onto the clutch pedal support with the bolt and nut.

**Torque: 34 N\*m (347 kgf\*cm, 25 ft.\*lbf)**

HINT:

Install the bolt from the left side of the vehicle.

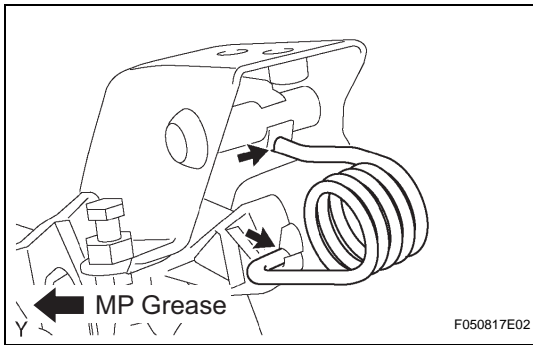

- 11. INSTALL TURN OVER SPRING SEAT COMPRESSION SPRING**
  - (a) Apply MP grease to the contact surfaces of the spring holder, clutch pedal and spring.
  - (b) Install the spring onto the clutch pedal and spring holder.
- 12. INSTALL CLUTCH MASTER CYLINDER ASSEMBLY**  
(See page [CL-12](#))
- 13. BLEED CLUTCH PIPE LINE**
- 14. INSPECT AND ADJUST CLUTCH PEDAL SUB-ASSEMBLY** (See page [CL-3](#))
- 15. CHECK FOR CLUTCH FLUID LEAKAGE**
- 16. CHECK FLUID LEVEL IN RESERVOIR**