
ROOM LIGHT ASSEMBLY

COMPONENTS




REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

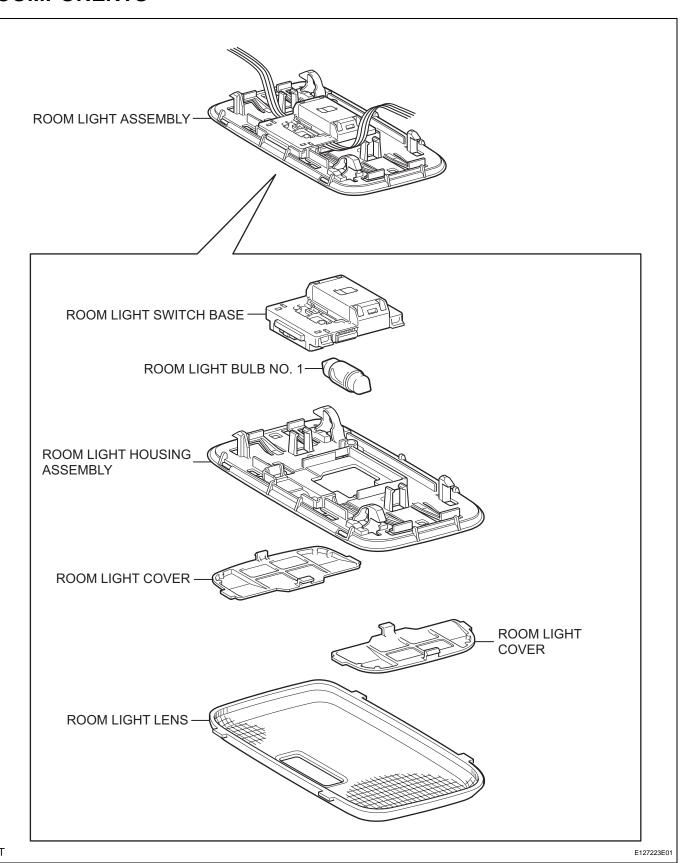


(a) Using a screwdriver with its tip wrapped in protective tape, disengage the 4 claws and remove the room light lens.

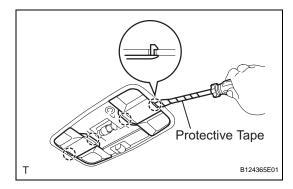

Protective Tape

E114441E01

(b) Using a screwdriver with its tip wrapped in protective tape, disengage the 4 claws and remove the 2 covers.

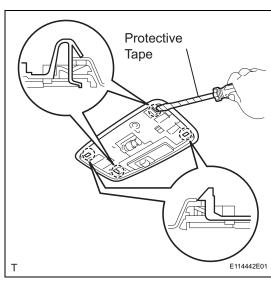

(c) Using a screwdriver with its tip wrapped in protective tape, disengage the 4 claws.

