
FRONT WIPER RUBBER

COMPONENTS

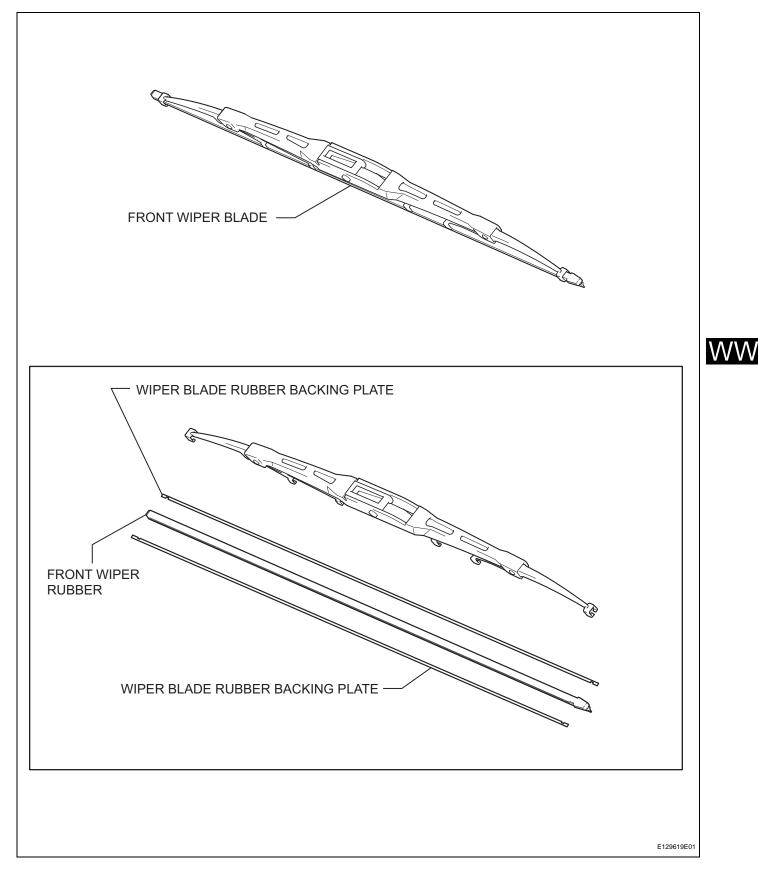


WW

REMOVAL

HINT:


- Use the same procedures for both the RH and LH sides.
- The procedure described below is for the LH side.

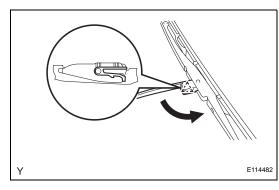

1. REMOVE FRONT WIPER BLADE

(a) Disengage the claw as shown in the illustration. **NOTICE:**

Do not fold the wiper arm with the wiper blade removed. The arm tip may damage the windshield surface.

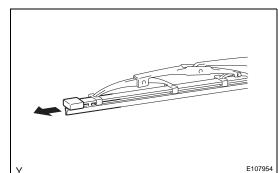


Curve

2. REMOVE FRONT WIPER RUBBER

(a) Remove the wiper rubber from the wiper blade.



(b) Remove the 2 wiper rubber backing plates from the wiper rubber.

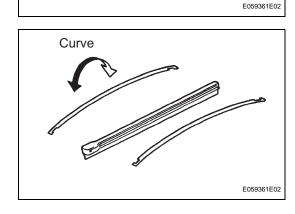


INSTALLATION


1. INSTALL FRONT WIPER RUBBER

(a) Install the 2 wiper rubber backing plates onto the wiper rubber.

NOTICE:

Install the backing plates facing the correct direction.

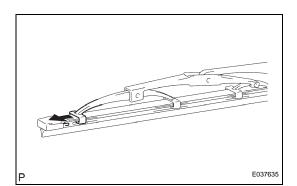

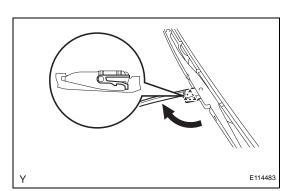

- (b) Install the wiper rubber with its head portion (swelled portion) facing the arm bearing.
 NOTICE: Push the wiper blade into the grooves of the wiper rubber to attach it completely.
- 2. INSTALL FRONT WIPER BLADE
 (a) Engage the claw and install the wiper blade.

