


# FUEL PUMP RESISTOR



## COMPONENTS

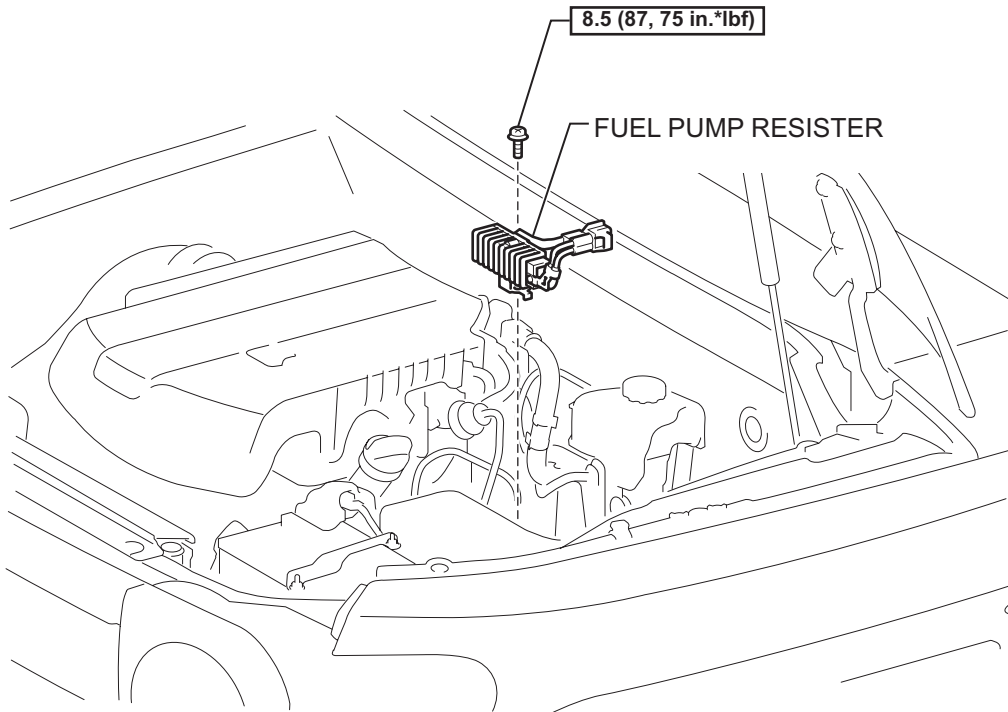

$\text{N} \cdot \text{m} (\text{kgf} \cdot \text{cm}, \text{ft} \cdot \text{lb} \cdot \text{f})$  : Specified torque

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FUEL PUMP RESISTOR**
  - (a) Disconnect the connector.
  - (b) Remove the bolt and the fuel pump resistor.

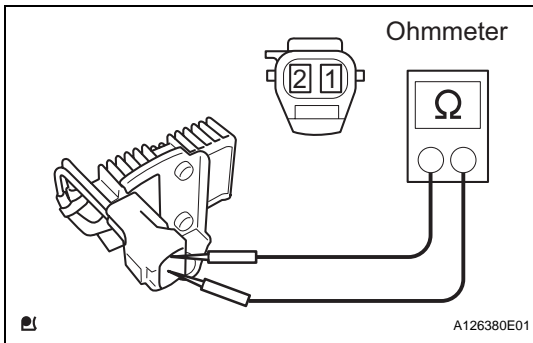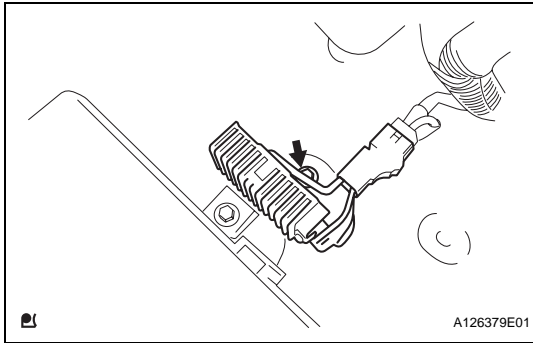


## INSPECTION

1. **INSPECT FUEL PUMP RESISTOR**
  - (a) Check the resistance.
    - (1) Using an ohmmeter, measure the resistance between the terminals.

**Standard resistance:**  
**0.941 to 0.999  $\Omega$**

If the result is not as specified, replace the fuel pump resistor.

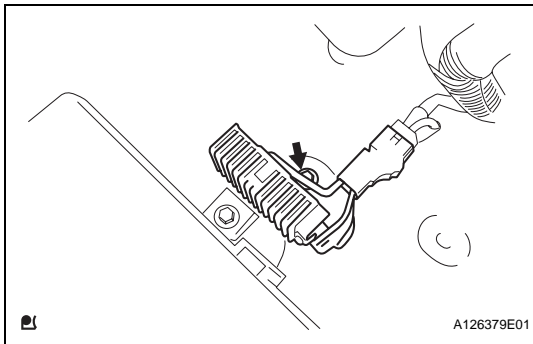

## INSTALLATION

1. **INSTALL FUEL PUMP RESISTOR**
  - (a) Install the fuel pump resistor with the bolt.
 

**Torque: 8.5 N\*m (87 kgf\*cm, 75 in.\*lbf)**
  - (b) Connect the connector.
2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**