
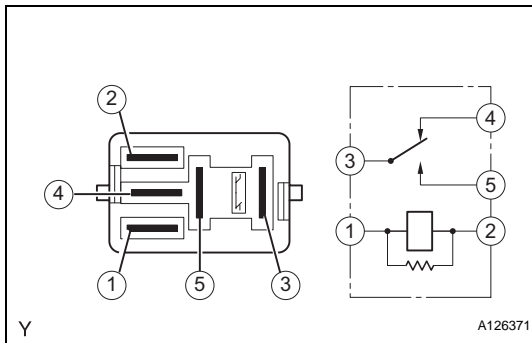


FUEL PUMP RELAY

ON-VEHICLE INSPECTION

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FUEL PUMP RELAY**
 - (a) Remove the relay block cover upper.
 - (b) Remove the fuel pump relay.

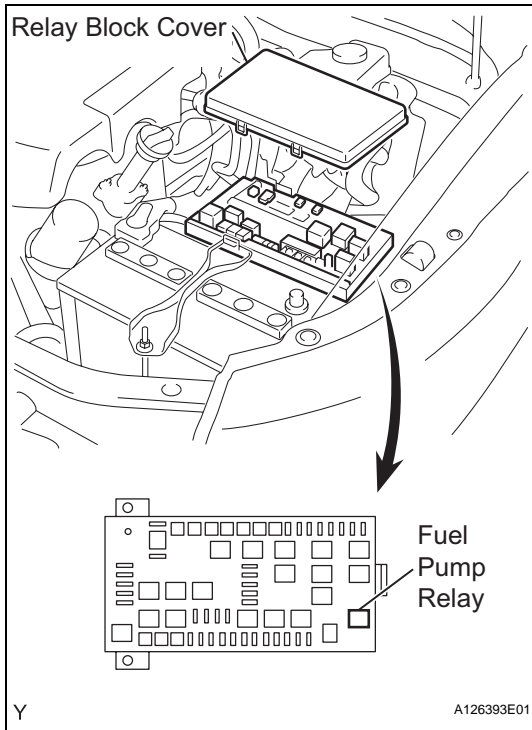

3. **INSPECT FUEL PUMP RELAY**
 - (a) Check the resistance.
 - (1) Using an ohmmeter, measure the resistance between the terminals.

Standard resistance

Tester Connection	Specified Condition
3 - 4	Below 1 Ω
	10 kΩ or higher (Battery voltage applied to terminals 1 and 2)
3 - 5	10 kΩ or higher
	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the fuel pump relay.

4. **INSTALL FUEL PUMP RELAY**
 - (a) Install the fuel pump relay.
 - (b) Install the relay block cover upper.
5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)