



# IGNITION SWITCH

## COMPONENTS


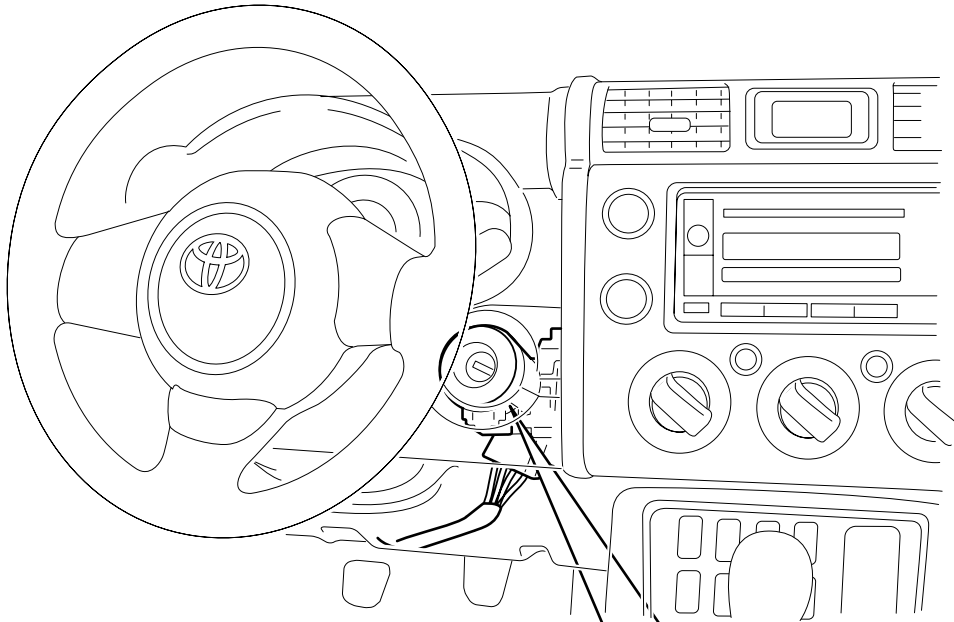


ST

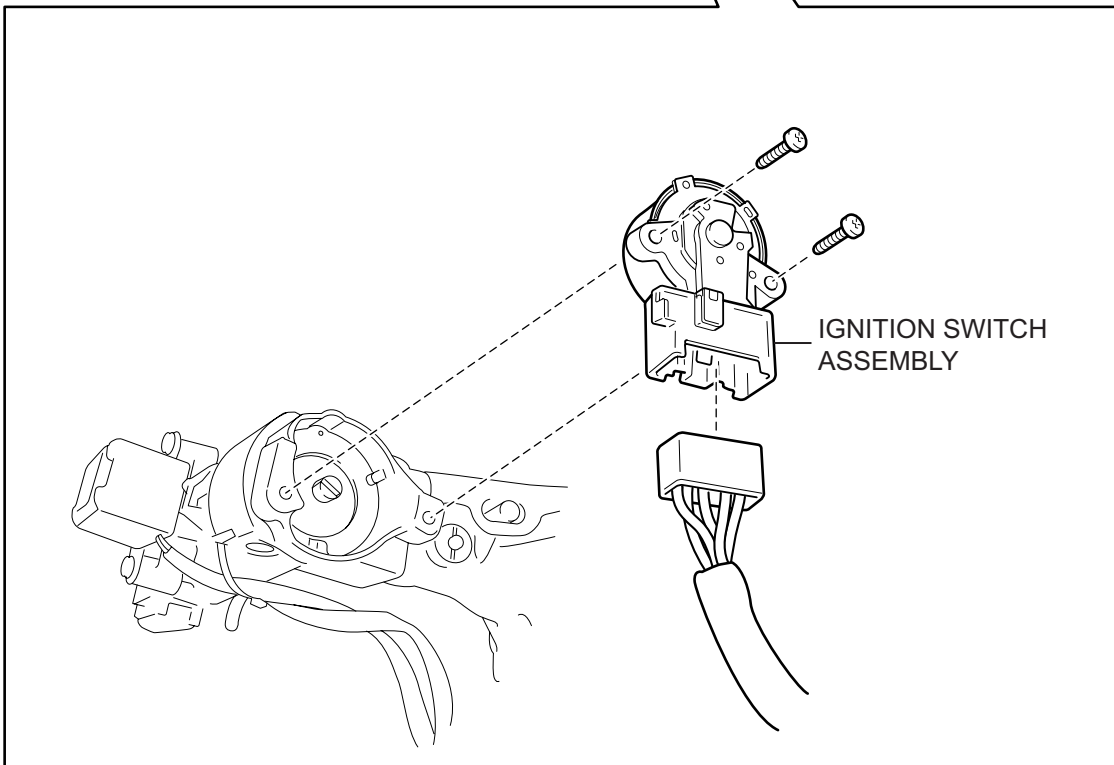

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE IGNITION SWITCH ASSEMBLY**
  - (a) Disconnect the connector.
  - (b) Remove the 2 screws, then remove the ignition switch.

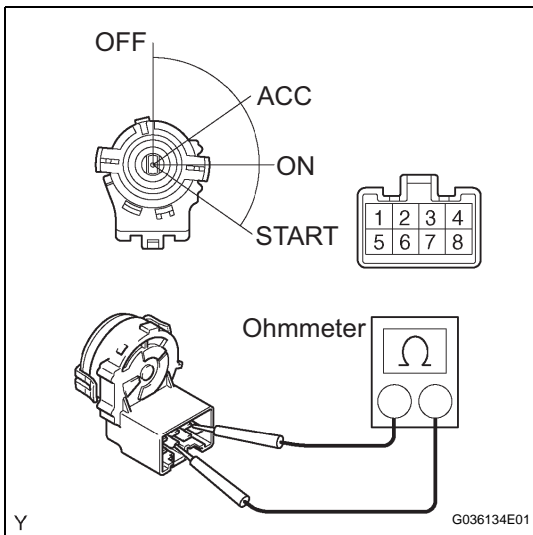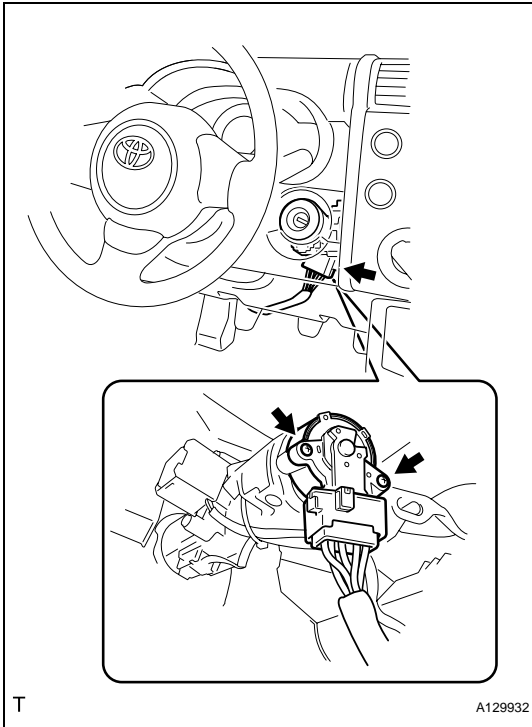

## INSPECTION

1. **INSPECT IGNITION SWITCH ASSEMBLY**
  - (a) Check the resistance.
    - (1) Using an ohmmeter, measure the resistance between the terminals.

### Standard resistance

Switch Condition	Tester Connection	Specified Condition
LOCK	-	10 k $\Omega$ or higher
ACC	1 (AM1) - 3 (ACC)	Below 1 $\Omega$
ON	1(AM1) - 3 (ACC) - 4 (IG1) 7 (IG2) - 8 (AM2)	Below 1 $\Omega$
START	1 (AM1) - 2 (ST1) - 4 (IG1) 6 (ST2) - 7 (IG2) - 8 (AM2)	Below 1 $\Omega$

If the result is not as specified, replace the ignition switch.