

INSPECTION

1. INSPECT ACCESS PANEL LOWER LOCK ASSEMBLY

- (a) Check the resistance of the rear door courtesy switch.
- (1) Using an ohmmeter, measure the resistance between the terminals when the latch is operated with a screwdriver.

Standard Resistance

Tester Connection	Condition	Specified Condition
1 - 2	Open	Below 1 Ω
1 - 2	Half Latch	Below 1 Ω
1 - 2	Full Latch	10 k Ω or higher


If the result is not as specified, replace the access panel lower lock.

INSTALLATION

1. INSTALL ACCESS PANEL LOWER LOCK ASSEMBLY

- (a) Install the access panel lower lock onto the rear door.

Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)

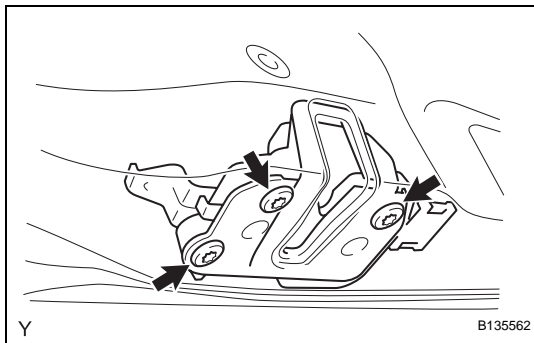

- (b) Connect the connector, connector clamp and access panel lock control cable.

2. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY (See page [ED-41](#))
3. INSTALL NO. 1 CUP HOLDER (See page [ED-41](#))
4. INSTALL REAR DOOR INSIDE HANDLE SUB-ASSEMBLY (See page [ED-41](#))
5. INSTALL LAP BELT OUTER ANCHOR COVER (See page [ED-42](#))
6. INSTALL ACCESS PANEL REAR WEATHERSTRIP (See page [ED-42](#))
7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

