


DTC CHECK / CLEAR

NOTICE:

When the diagnosis system is changed from normal mode to check mode or vice versa, all DTCs and freeze frame data recorded in normal mode are erased. Before changing modes, always check and make a note of DTCs and freeze frame data.

HINT:

- DTCs which are stored in the ECM can be displayed on an intelligent tester. An intelligent tester can display current and pending DTCs.
- Some DTCs are not set if the ECM does not detect the same malfunction again during a second consecutive driving cycle. However, such malfunctions, detected on only one occasion, are stored as pending DTCs.

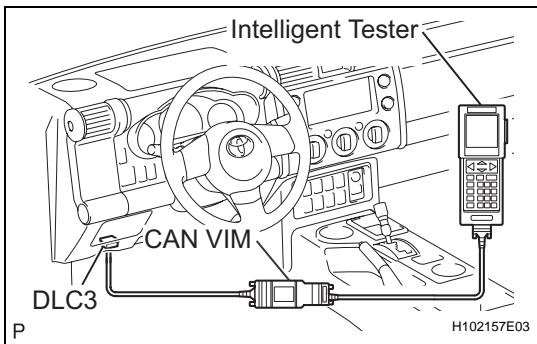

1. CHECK DTC (Using an intelligent tester)


- (a) Connect an intelligent tester to the DLC3.
- (b) Turn the ignition switch ON.
- (c) Turn the tester ON.
- (d) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- (e) Check the DTC(s) and freeze frame data, and then write them down.
- (f) Check the details of the DTC(s) (See page [ES-57](#)).

2. CLEAR DTC (Using an intelligent tester)

- (a) Connect an intelligent tester to the DLC3.
- (b) Turn the ignition switch ON.
- (c) Turn the tester ON.
- (d) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CLEAR CODES.
- (e) Press the YES button.

3. CLEAR DTC (Without using an intelligent tester)

- (a) Perform either one of the following operations.
 - (1) Disconnect the negative battery cable for more than 1 minute.
 - (2) Remove the EFI and ETCS fuses from the Relay Block (R/B) located inside the engine compartment for more than 1 minute.

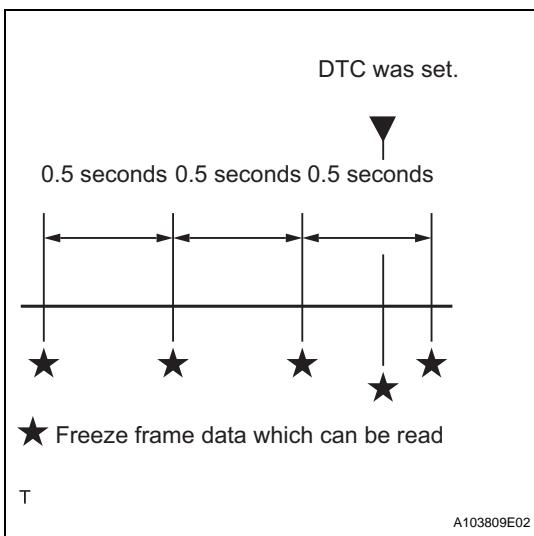

FREEZE FRAME DATA

1. DESCRIPTION

Freeze frame data record the engine conditions (fuel system, calculated load, engine coolant temperature, fuel trim, engine speed, vehicle speed, etc.) when a malfunction is detected. When troubleshooting, it can help determine if the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was LEAN or RICH, and other data, from the time the malfunction occurred.

HINT:

If it is impossible to replicate the problem even though a DTC is detected, confirm the freeze frame data.

The ECM records engine conditions in the form of freeze frame data every 0.5 seconds. Using an intelligent tester, five separate sets of freeze frame data, including the data values at the time when the DTC was set, can be checked.

- 3 data sets before the DTC was set
- 1 data set when the DTC was set
- 1 data set after the DTC was set

These data sets can be used to simulate the conditions of the vehicle around the time of the occurrence of the malfunction. The data may assist in identifying of the cause of the malfunction, and in judging whether it was temporary or not.

2. LIST OF FREEZE FRAME DATA

LABEL (Intelligent Tester Display)	Measure Item/Range	Diagnostic Note
INJECTOR	Injector	-
IGN ADVANCE	Ignition advance	-
CALC LOAD	Calculate load	Calculated load by ECM
VEHICLE LOAD	Vehicle load	-
MAF	Mass air flow volume	If value approximately 0.0 g/sec: • Mass air flow meter power source circuit open or short • VG circuit open or short If value 160.0 g/sec or more: • E2G circuit open
ENGINE SPD	Engine speed	-
VEHICLE SPD	Vehicle speed	Speed indicated on speedometer
COOLANT TEMP	Engine coolant temperature	If value -40°C (-40°F), sensor circuit open If value 140°C (284°F) or more, sensor circuit shorted
INTAKE AIR	Intake air temperature	If value -40°C (-40°F), sensor circuit open If value 140°C (284°F) or more, sensor circuit shorted
AIR-FUEL RATIO	Air-fuel ratio	-
PURGE DENSITY	Learning value of purge density	-
EVAP PURGE FLOW	Purge flow	-
EVAP PURGE VSV	EVAP purge VSV duty ratio	-
KNOCK CRRT VAL	Correction learning value of knocking	-
KNOCK FB VAL	Feedback value of knocking	-

LABEL (Intelligent Tester Display)	Measure Item/Range	Diagnostic Note
ACCEL POS #1	Absolute Accelerator Pedal Position (APP) No. 1	-
ACCEL POS #2	Absolute APP No. 2	-
THROTTLE POS	Throttle position	Read value with ignition switch ON (Do not start engine)
THROTTLE POS	Throttle sensor positioning	Read value with ignition switch ON (Do not start engine)
THROTTLE POS #2	Throttle sensor positioning #2	-
THROTTLE MOT	Throttle motor	-
O2S B1 S2	Heated oxygen sensor output voltage	Performing INJ VOL or A/F CONTROL function of ACTIVE TEST enables technician to check voltage output of sensor
O2S B2 S2	Heated oxygen sensor output voltage	Performing INJ VOL or A/F CONTROL function of ACTIVE TEST enables technician to check voltage output of sensor
AFS B1 S1	A/F sensor output voltage	Performing INJ VOL or A/F CONTROL function of ACTIVE TEST enables technician to check voltage output of sensor
AFS B2 S1	A/F sensor output voltage	Performing INJ VOL or A/F CONTROL function of ACTIVE TEST enables technician to check voltage output of sensor
AFS B2 S1	A/F sensor output current	Performing INJ VOL or A/F CONTROL function of ACTIVE TEST enables technician to check current output of sensor
TOTAL FT #1	Total fuel trim (Bank 1)	-
TOTAL FT #2	Total fuel trim (Bank 2)	-
SHORT FT #1	Short-term fuel trim (Bank 1)	Short-term fuel compensation used to maintain air-fuel ratio at stoichiometric air-fuel ratio
LONG FT #1	Long-term fuel trim (Bank 1)	Overall fuel compensation carried out in long-term to compensate a continual deviation of short-term fuel trim from central valve
SHORT FT #2	Short-term fuel trim (Bank 2)	Short-term fuel compensation used to maintain air-fuel ratio at stoichiometric air-fuel ratio
LONG FT #2	Long-term fuel trim (Bank 2)	Overall fuel compensation carried out in long-term to compensate a continual deviation of short-term fuel trim from central valve
FUEL SYS #1	Fuel system status (Bank1)	<ul style="list-style-type: none"> • OL (Open Loop): Has not yet satisfied conditions to go closed loop • CL (Closed Loop): Using heated oxygen sensor as feedback for fuel control • OL DRIVE: Open loop due to driving conditions (fuel enrichment) • OL FAULT: Open loop due to detected system fault • CL FAULT: Closed loop but heated oxygen sensor, which used for fuel control, malfunctioning
FUEL SYS #2	Fuel system status (Bank2)	<ul style="list-style-type: none"> • OL (Open Loop): Has not yet satisfied conditions to go closed loop • CL (Closed Loop): Using heated oxygen sensor as feedback for fuel control • OL DRIVE: Open loop due to driving conditions (fuel enrichment) • OL FAULT: Open loop due to detected system fault • CL FAULT: Closed loop but heated oxygen sensor, which used for fuel control, malfunctioning

ES

LABEL (Intelligent Tester Display)	Measure Item/Range	Diagnostic Note
O2FT B1 S2	Fuel trim at heated oxygen sensor	-
O2FT B2 S2	Fuel trim at heated oxygen sensor	-
AF FT B1 S1	Fuel trim at A/F sensor	-
AFS B1 S1	A/F sensor output current	Performing INJ VOL or A/F CONTROL function of ACTIVE TEST enables technician to check current output of sensor
AF FT B2 S1	Fuel trim at A/F sensor	-
CAT TEMP B1 S1	Catalyst temperature	-
CAT TEMP B2 S1	Catalyst temperature	-
CAT TEMP B1 S2	Catalyst temperature	-
CAT TEMP B2 S2	Catalyst temperature	-
S O2S B1 S2	Sub heated oxygen sensor impedance	-
S O2S B2 S2	Sub heated oxygen sensor impedance	-
INI COOL TEMP	Initial engine coolant temperature	-
INI INTAKE TEMP	Initial intake air temperature	-
INJ VOL	Injection volume	-
STARTER SIG	Starter signal	-
PS SW	Power steering signal	-
PS SIGNAL	Power steering signal (history)	This signal status usually ON until battery terminals disconnected
CTP SW	Closed throttle position switch	-
A/C SIG	A/C signal	-
ELECT LOAD SIG	Electrical load signal	-
STOP LIGHT SW	Stop light switch	-
BATTERY VOLTAGE	Battery voltage	-
ATM PRESSURE	Atmospheric pressure	-
FUEL PMP SP CTL	Fuel pump speed control status	-
ACIS CTRL B2	ACIS VSV status	-
ACT VSV	A/C cut status	-
VVT CTRL B2	VVT control status	-
EVAP (Purge) VSV	EVAP purge VSV	VSV for EVAP controlled by ECM (ground side duty control)
FUEL PUMP / SPD	Fuel pump speed status	-
VVT CTRL B1	VVT control status	-
VACUUM PUMP	Key-off EVAP system pump status	-
EVAP VENT VAL	Key-off EVAP system vent valve status	-
TC/TE1	TC and TE1 terminals of DLC3	-
ENG SPEED #1	Engine speed for cylinder 1	-
ENG SPEED #2	Engine speed for cylinder 2	-
ENG SPEED #3	Engine speed for cylinder 3	-
ENG SPEED #4	Engine speed for cylinder 4	-
ENG SPEED #5	Engine speed for cylinder 5	-
ENG SPEED #6	Engine speed for cylinder 6	-
ENG SPEED ALL	Engine speed for all cylinders	-
VVTL AIM ANGL #1	VVT aim angle	-
VVT CHNG ANGL #1	VVT change angle	-
VVT OCV DUTY B1	VVT OCV operation duty	-
VVTL AIM ANGL #2	VVT aim angle	-
VVT CHNG ANGL #2	VVT change angle	-
VVT OCV DUTY B2	VVT OCV operation duty	-

LABEL (Intelligent Tester Display)	Measure Item/Range	Diagnostic Note
FC IDL	Idle fuel cut	ON: when throttle valve fully closed and engine speed over 3,500 rpm
FC TAU	FC TAU	Fuel cut being performed under very light load to prevent engine combustion from becoming incomplete
IGNITION	Ignition	-
CYL #1	Cylinder #1 misfire rate	Displayed in only idling
CYL #2	Cylinder #2 misfire rate	Displayed in only idling
CYL #3	Cylinder #3 misfire rate	Displayed in only idling
CYL #4	Cylinder #4 misfire rate	Displayed in only idling
CYL #5	Cylinder #5 misfire rate	Displayed in only idling
CYL #6	Cylinder #6 misfire rate	Displayed in only idling
CYL ALL	All cylinder misfire rate	Displayed in only idling
MISFIRE RPM	Misfire RPM	-
MISFIRE LOAD	Misfire load	-
MISFIRE MARGIN	Margin to detect engine misfire	-
ENG RUN TIME	Accumulated engine running time	-
TIME DTC CLEAR	Cumulative time after DTC cleared	-
DIST DTC CLEAR	Accumulated distance from DTC cleared	-
WU CYC DTC CLEAR	Warm-up cycle after DTC cleared	-

ES